



BAOTIAN SMART RIDER 125 ERSATZTEILE HANDBUCH BT125T-2

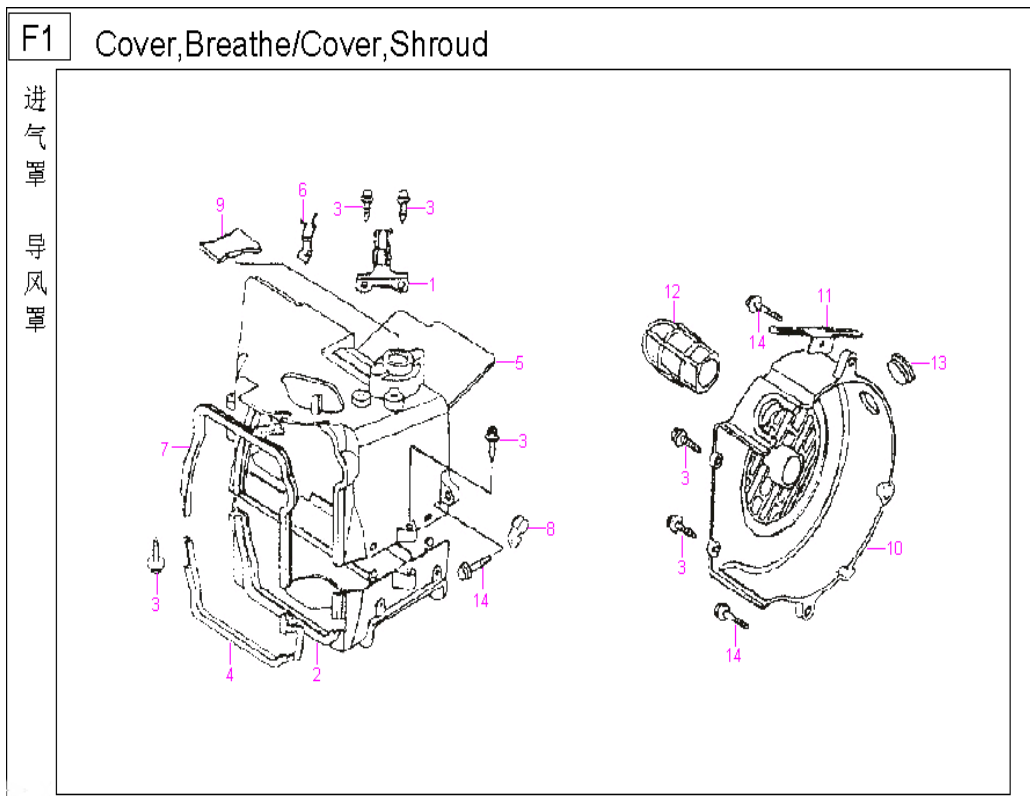


F1 Cover breathe & Cover shroud

NO.	Component and Parts No.	English Name	Quantity
F1/1	108101-152QMI-000	Clamper,breather tube	1
F1/2	108200-152QMI-000	Upper shroud	1
F1/3	GB/T 845-1985	Screw tapping ST4.2*16	6
F1/4	108201-152QMI-000	Seal ring A	1
F1/5	108100-152QMI-000	Lower shroud	1
F1/6	108102-152QMI-000	Cord clip	1
F1/7	108103-152QMI-000	Seal ring B	1
F1/8	101112-152QMI-000	Clamper,overflow tube	1
F1/9	108104-152QMI-000	Rubber plug	1
F1/10	108300-152QMI-000	Cover assy,breathe	1
F1/11	108302-152QMI-000	Clamper,starter	1
F1/12	108303-152QMI-000	Cooling tube	1
F1/13	108301-152QMI-000	Observed plug	1
F1/14	GB/T 5787-1986	Bolt M6*25	3

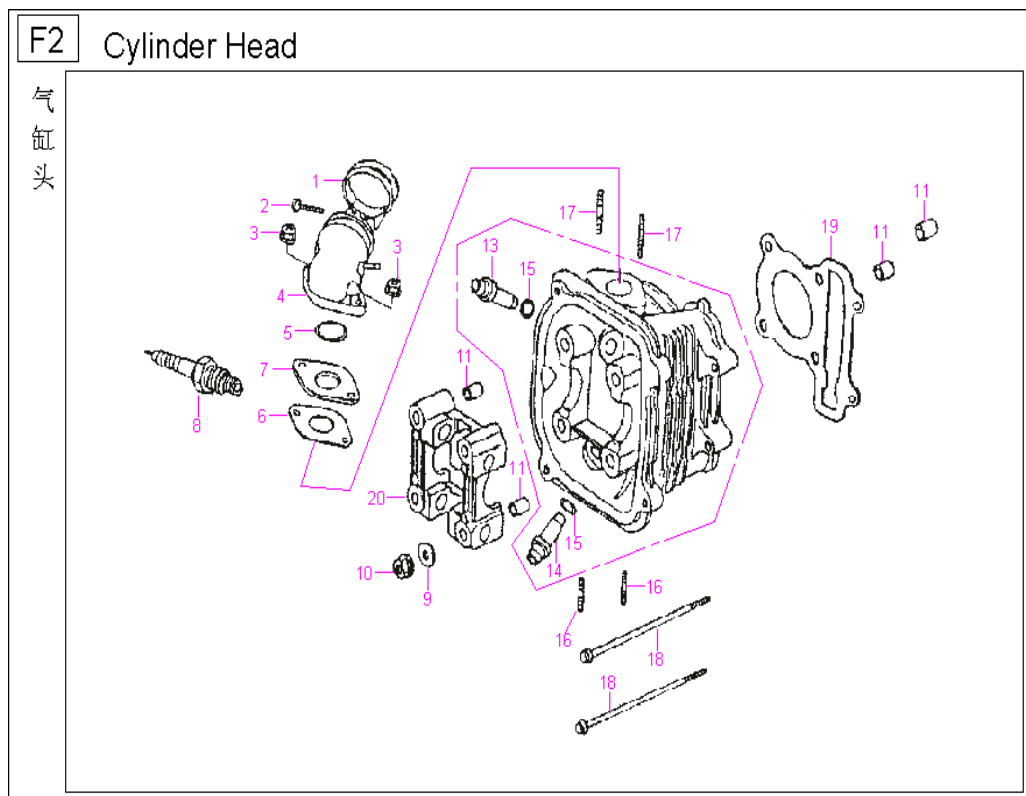


F2 Cylinder head

NO.	Component and Parts No.	English Name	Quantity
F2/1	101310-152QMI-000	Clamper	1
F2/2	GB/T 818-1985	Screw M4*25	1
F2/3	GB/T 6177-1986	Nut M6	2
F2/4	101300-152QMI-000	Pipe in	1
F2/5	GB3452.1	O-ring 27*2.0	1
F2/6	101320-152QMI-000	Insulator, carburetor	1
F2/7	124029-152QMI-000	Gasket,carburetor insulator	1
F2/8	122100-152QMI-000	Spark plug(A7RTC)	1
F2/9	101207-152QMI-000	Washer	4
F2/10	101206-152QMI-000	Nut M8	4
F2/11	DW*8.3*10*16	Dowel Pin	4
F2/12	101200-152QMI-000	Cylinder head	1
F2/13	101201-152QMI-000	Guide pipe,in valve	1
F2/14	101202-152QMI-000	Guide pipe,ex valve	1
F2/15	GB2452.1	O-ring 9*1.6	2
F2/16	101205-152QMI-000	2-stud bolt M6*32	2
F2/17	101302-152QMI-000	2-stud bolt M6*63	2
F2/18	GB/T 5787-1986	Bolt M6*100	2
F2/19	124010-152QMI-000	Gasket,cylinder head	1
F2/20	109201-152QMI-000	Setting base,camshaft	1

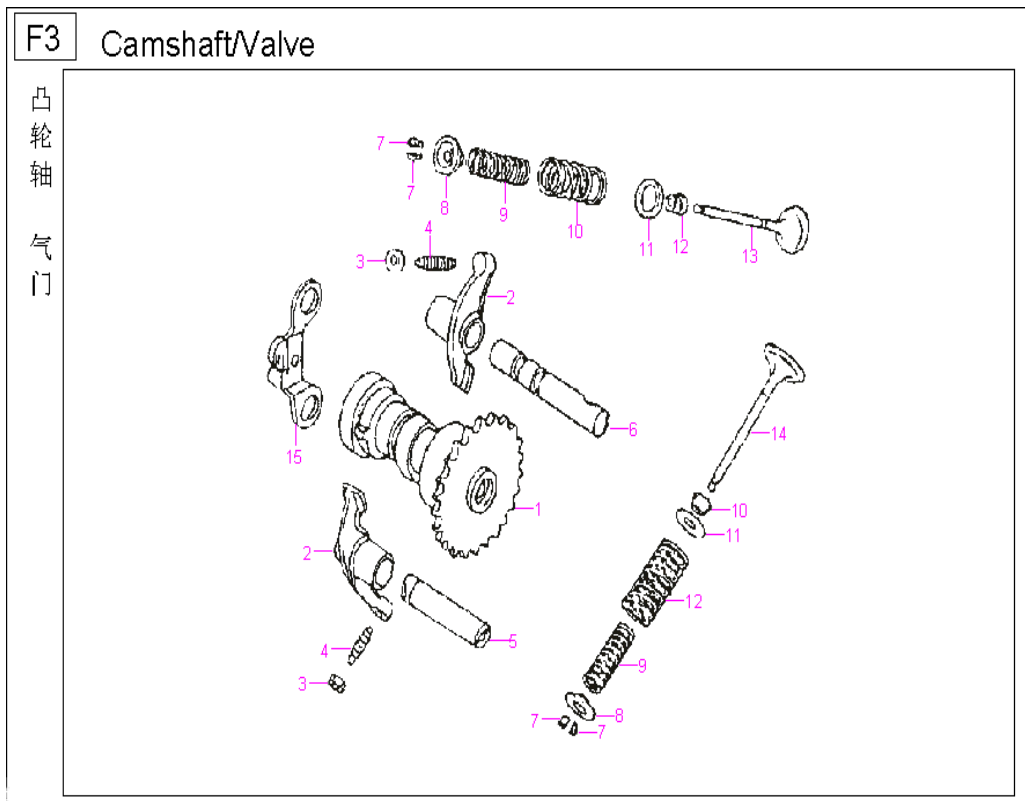


F3 Camshaft & Valve

NO.	Component and Parts No.	English Name	Quantity
F3/1	110100-152QMI-000	Camshaft Comp.	1
F3/2	109202-152QMI-000	Arm,vale rocker	2
F3/3	109203-152QMI-000	Nut	2
F3/4	109204-152QMI-000	Adjusting screw	2
F3/5	109205-152QMI-000	Shaft comp.,Ex.	1
F3/6	109206-152QMI-000	Shaft comp., In	1
F3/7	109112-152QMI-000	Lock,valve	4
F3/8	109113-152QMI-000	Retainer,valve spring	2
F3/9	109114-152QMI-000	Inner spring,valve	2
F3/10	109115-152QMI-000	Outer spring,valve	2
F3/11	109116-152QMI-000	Seat,valve spring	2
F3/12	109117-152QMI-000	Seal,valve	2
F3/13	109111-152QMI-000	Valve in.	1
F3/14	109121-152QMI-000	Valve ex.	1
F3/15	109209-152QMI-000	Stop plate	1

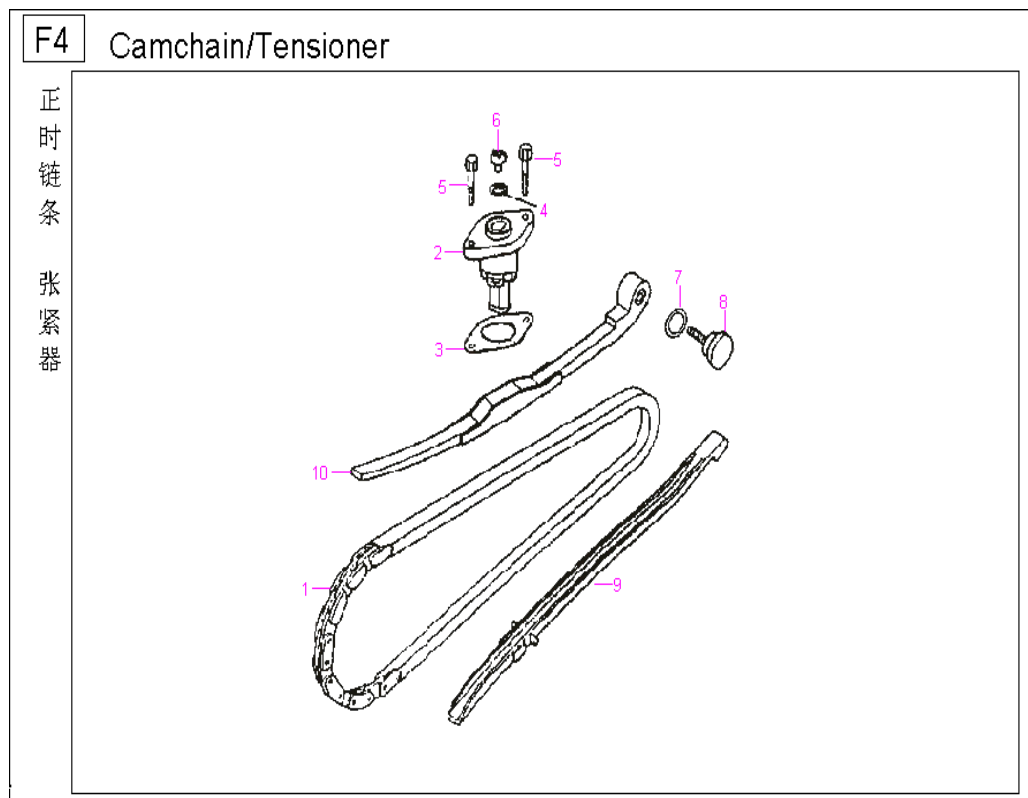


F4Camchain &Tensioner

NO.	Component and Parts No.	English Name	Quantity
F4/1	109400-152QMI-000	Cam chain	1
F4/2	109530-152QMI-000	Tensioning device	1
F4/3	124022-152QMI-000	Gasket,tensioner device	1
F4/4	GB3452.1	O-ring 9.5*1.5	1
F4/5	GB/T 5787-1986	Bolt M6*22	2
F4/6	109531-152QMI-000	Bolt M6*6	1
F4/7	GB3452.1	O-ring 15.2*1.5	1
F4/8	109501-152QMI-000	Bolt,tensioning board	1
F4/9	109520-152QMI-000	Guiding board comp.	1
F4/10	109510-152QMI-000	Tensioning board comp.	1

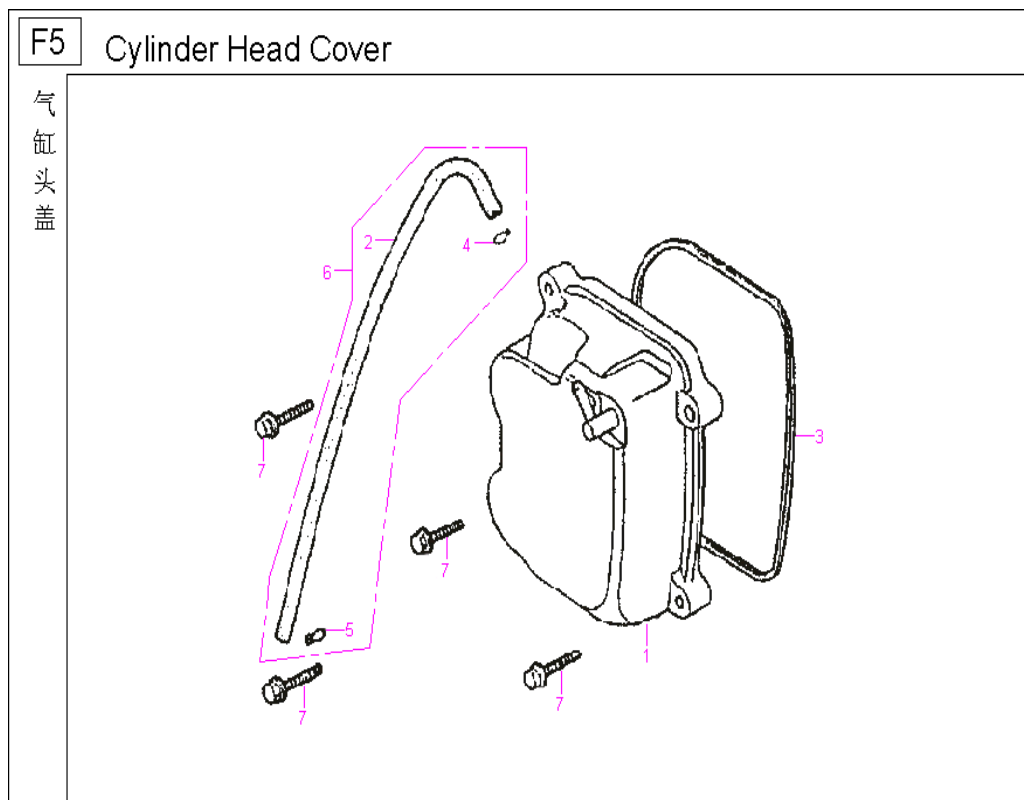


F5 Cylinder head cover

NO.	Component and Parts No.	English Name	Quantity
F5/1	101101-152QMI-000	Cover comp.,cylinder head	1
F5/2	108701-152QMI-000	Tube	1
F5/3	101104-152QMI-000	Gasket,cylinder head cover	1
F5/4	108702-152QMI-000	Tube clip B8	1
F5/5	108703-152QMI-000	Tube clip B12	1
F5/6	108710-152QMI-000	Tube assy	1
F5/7	GB/T 5787-1986	Bolt M6*25	4

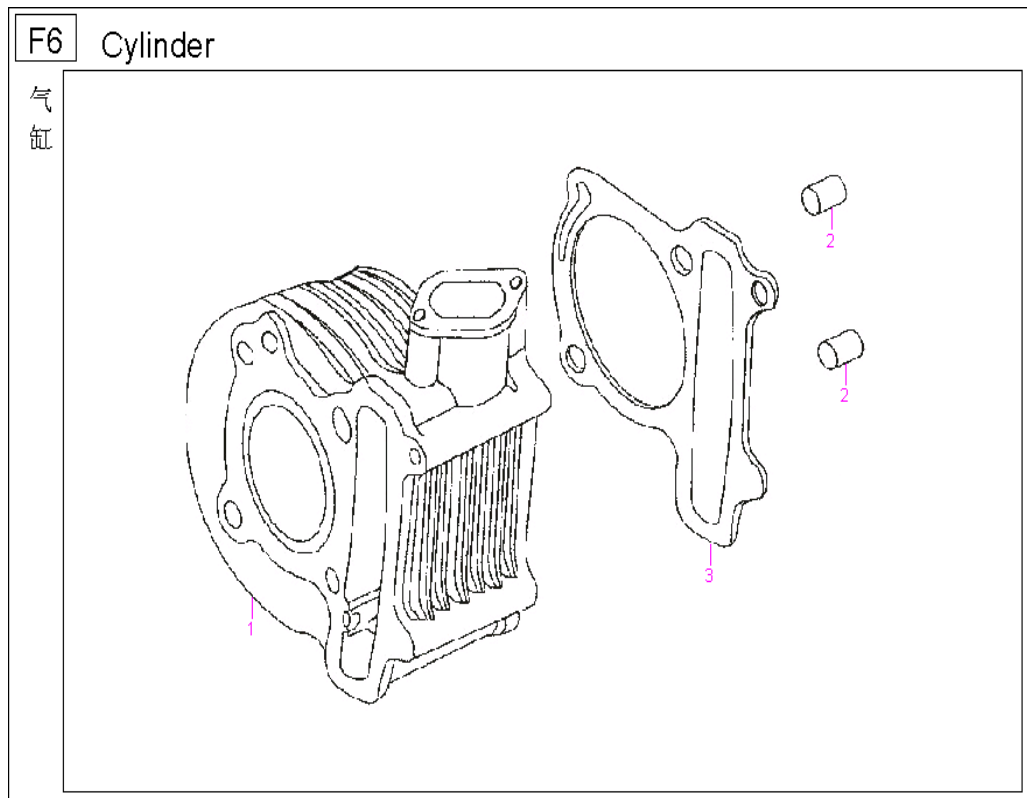


F6Cylinder

NO.	Component and Parts No.	English Name	Quantity
F6/1	102100-152QMI-000	Cylinder assy	1
F6/2	DWX8.3*10*16	Dowel Pin	2
F6/3	124021-152QMI-000	Gasket,cylinder	1

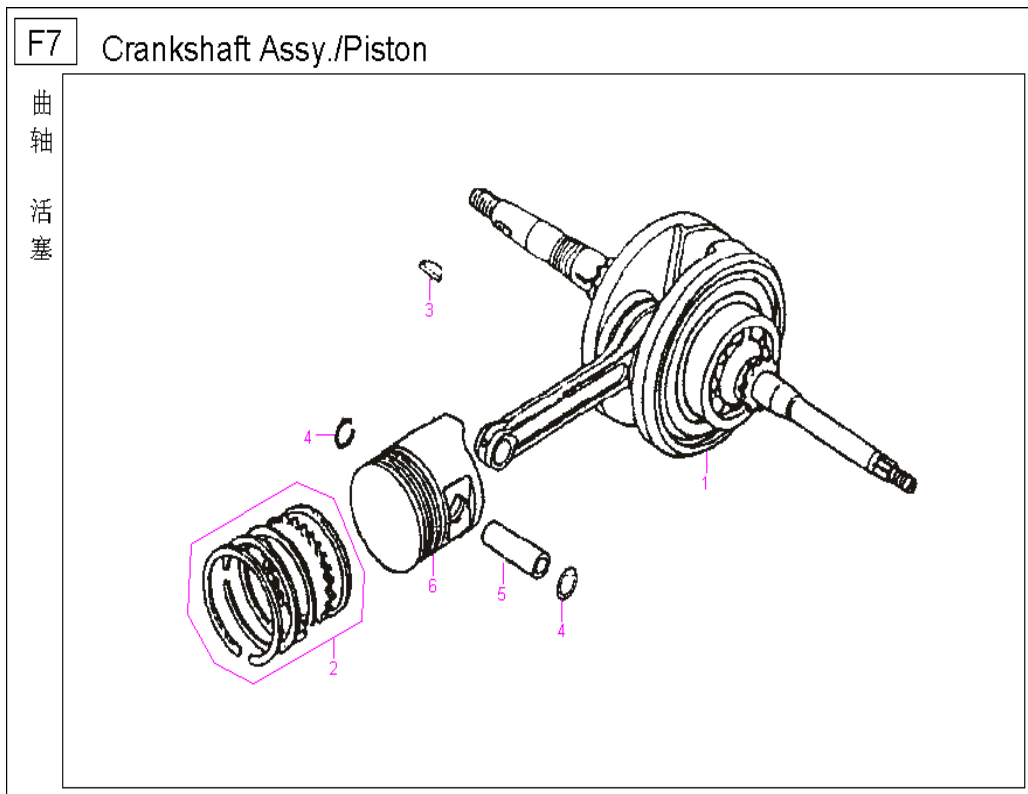


F7Crankshaft assy.& Piston

NO.	Component and Parts No.	English Name	Quantity
F7/1	113100-152QMI-000	Crankshaft-rod assy	1
F7/2	112100-152QMI-000	Ring set,piston	1
F7/3	113131-152QMI-000	Woodruff key	1
F7/4	111131-152QMI-000	Clip,piston pin	2
F7/5	111121-152QMI-000	Piston pin	1
F7/6	111111-152QMI-000	Piston	1

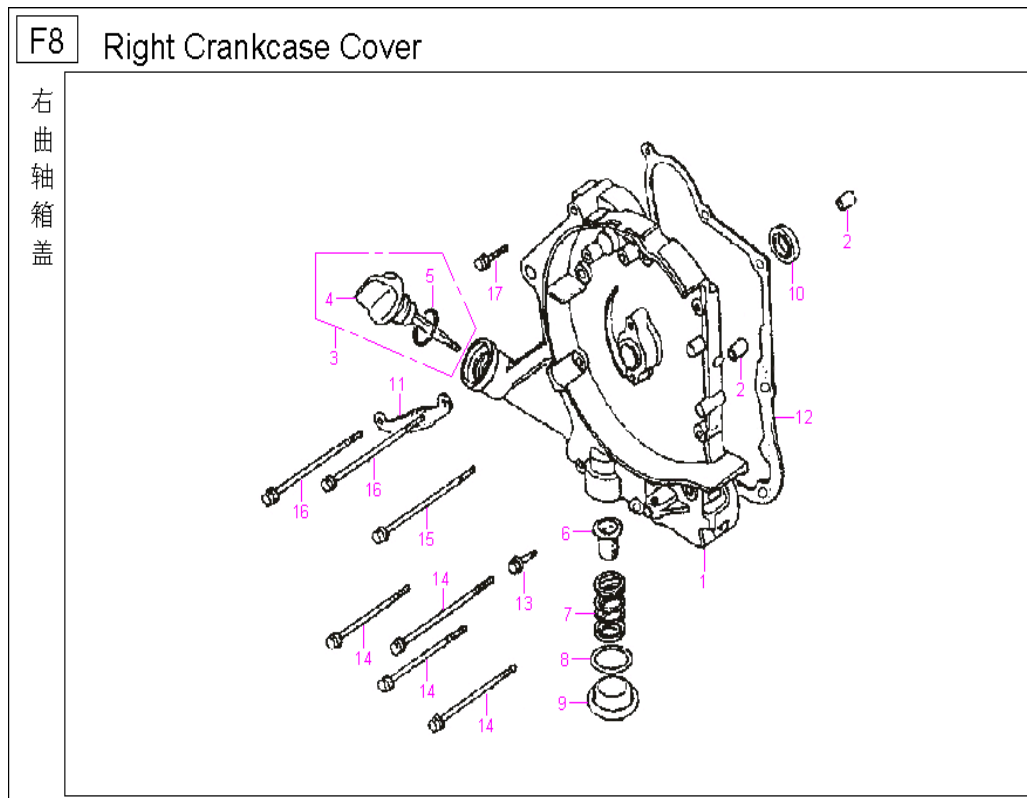


F8Right Crankcase Cover

NO.	Component and Parts No.	English Name	Quantity
F8/1	106101-152QMI-000	Right crankcase cover	1
F8/2	DWX6.3*8*14	Dowel Pin	2
F8/3	123100-152QMI-000	Gauge assy., oil level	1
F8/4	123101-152QMI-000	Oil level gauge	1
F8/5	GB3452.1	O-ring 18*3	1
F8/6	119303-152QMI-000	Screen,oil filter	1
F8/7	119301-152QMI-000	Spring,oil filter screen	1
F8/8	GB3452.1	O-ring 30.8*3	1
F8/9	119302-152QMI-000	Cap,oil filter screen	1
F8/10	YF 19.8*30*5	Oil seal YF19.8*30*5	1
F8/11	106105-152QMI-000	Clamper,A.C Generator cord	1
F8/12	124024-152QMI-000	Gasket,right crankcase cover	1
F8/13	GB/T 5787-1986	Bolt M6*32	1
F8/14	GB/T 5787-1986	Bolt M6*95	4
F8/15	GB/T 5787-1986	Bolt M6*100	1
F8/16	GB/T 5787-1986	Bolt M6*110	2
F8/17	GB/T 5787-1986	Bolt M6*40	1

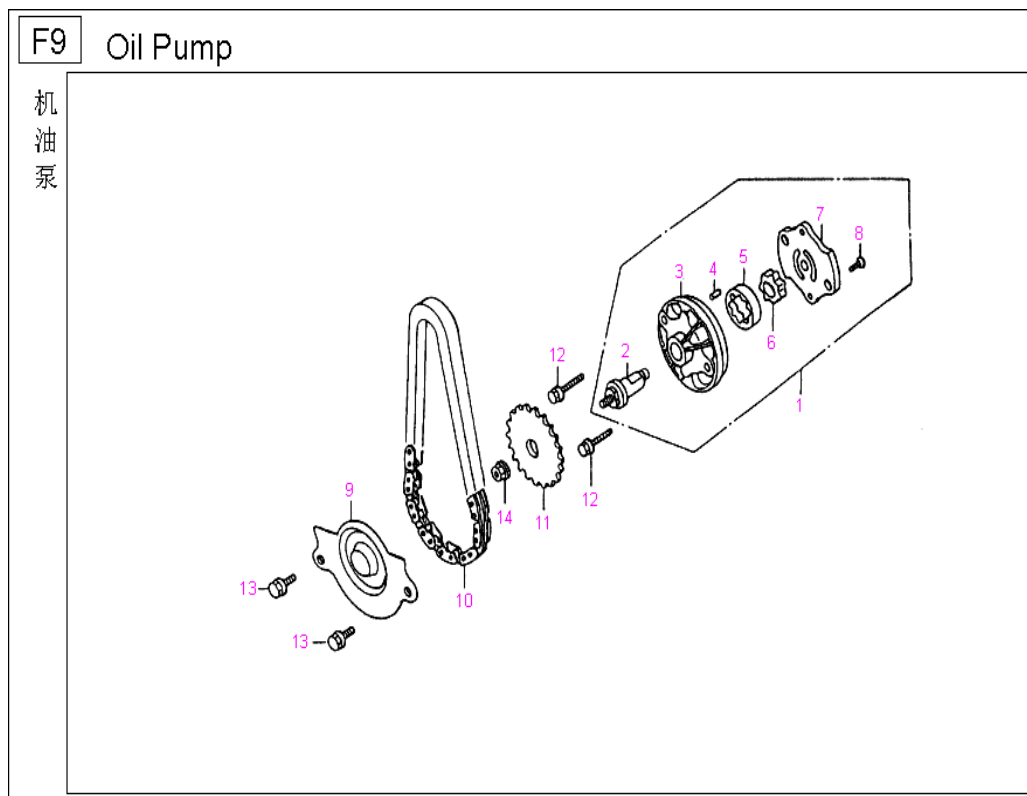

F9 Oil Pump

NO.	Component and Parts No.	English Name	Quantity
F9/1	119100-152QMI-000	Oil pump assy.	1
F9/2	119101-152QMI-000	Oil pump shaft	1
F9/3	119130-152QMI-000	Oil pump body	1
F9/4	DWX4*6.5	Dowel pin 4*6.5	1
F9/5	119102-152QMI-000	Outer rotor,oil pump	1
F9/6	119103-152QMI-000	Inner rotor,oil pump	1
F9/7	119107-152QMI-000	Plate	1
F9/8	GB/T 818-1985	Screw M3*10	1
F9/9	119106-152QMI-000	Oil separator	1
F9/10	119140-152QMI-000	Oil pump chain	1
F9/11	119120-152QMI-000	Driven sprocket,oil pump	1
F9/12	GB/T 5787-1986	Bolt M6*25	2
F9/13	GB/T 5787-1986	Bolt M6*12	2
F9/14	GB/T 6177-1986	Nut M6	1

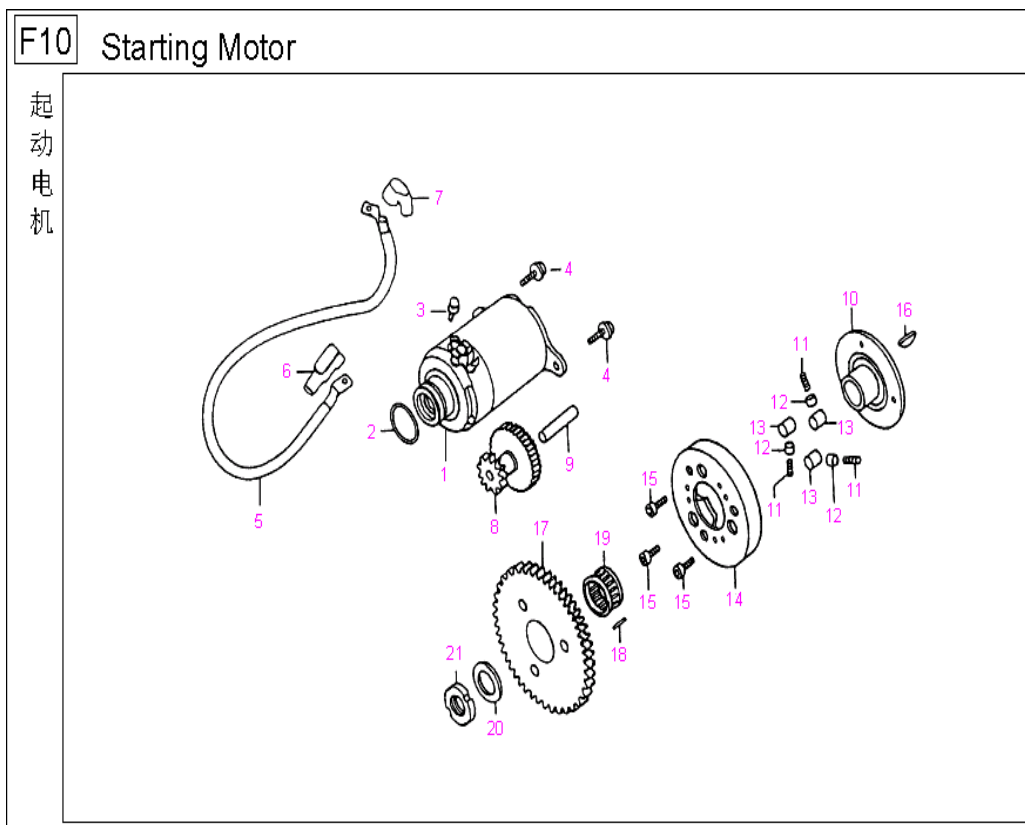


F10 Starting Motor

NO.	Component and Parts No.	English Name	Quantity
F10/1	121100-152QMI-000	Starter motor assy.	1
F10/2	GB3452.1	O-ring 24.4*3.1	1
F10/3	GB/T 5787-1986	Bolt M5*8	1
F10/4	GB/T 5787-1986	Bolt M6*16	2
F10/5	121101-152QMI-000	Starting motor cable	1
F10/6	121102-152QMI-000	Rubber A	1
F10/7	121103-152QMI-000	Rubber B	1
F10/8	118120-152QMI-000	Electric starting gear	1
F10/9	118110-152QMI-000	Shaft,electric starting	1
F10/10	118156-152QMI-000	Flange,starting clutch	1
F10/11	118154-152QMI-000	Spring,starting clutch roller	3
F10/12	118155-152QMI-000	Cap, starting clutch roller spring	3
F10/13	118157-152QMI-000	Roller	3
F10/14	118158-152QMI-000	Outer comp.,starting clutch	1
F10/15	GB/T 70-1985	Bolt M6*12	3
F10/16	GB/T 1099-1979	Woodruff key	1
F10/17	118130-152QMI-000	Gear comp.,starting clutch	1
F10/18	DWX5*6	Dowel pin 5*6	1
F10/19	118159-152QMI-000	Needle bearing	1
F10/20	GB/T 97.1-1985	Washer 22.6*31*2.5	1
F10/21	GB/T 812-1988	Nut M22	1


F11 Left Crankcase Cover

左
曲
轴
箱
盖

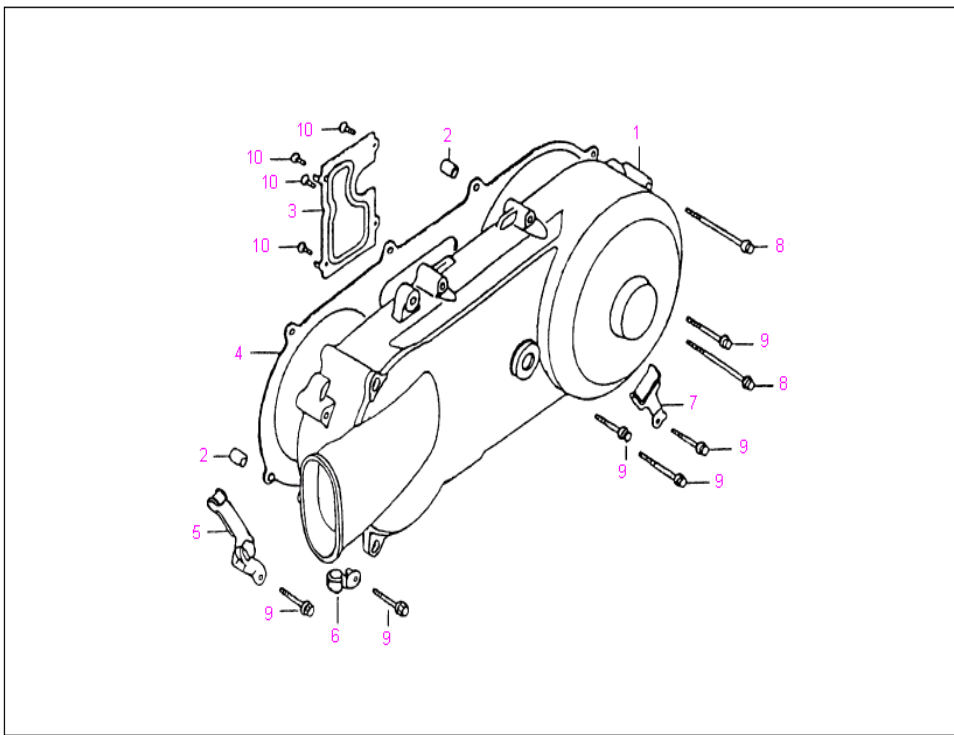


F11 Left Crankcase Cover

NO.	Component and Parts No.	English Name	Quantity
F11/1	103101-152QMI-000	Left crankcase cover	1
F11/1A	103101-152QMI-000A	Left crankcase cover(lengthened)	1
F11/1B	103101-152QMI-000B	Left crankcase cover(lute style)	1
F11/2	DWX 8*6.3*14	Dowel pin	2
F11/3	103107-152QMI-000	Guiding plate	1
F11/4	124026-152QMI-000	Gasket,left cover	1
F11/4A	124026A-152QMI-000	Gasket,left cover(lengthened)	1
F11/5	103102-152QMI-000	Clamber	1
F11/6	103108-152QMI-000	Clamber,overflow tube	1
F11/7	103110-152QMI-000	Clamber,brake cable	1
F11/8	GB/T 5787-1986	Bolt M6*65	2
F11/9	GB/T 5787-1986	Bolt M6*40	6
F11/10	GB/T 818-1985	Screw M4*8	4

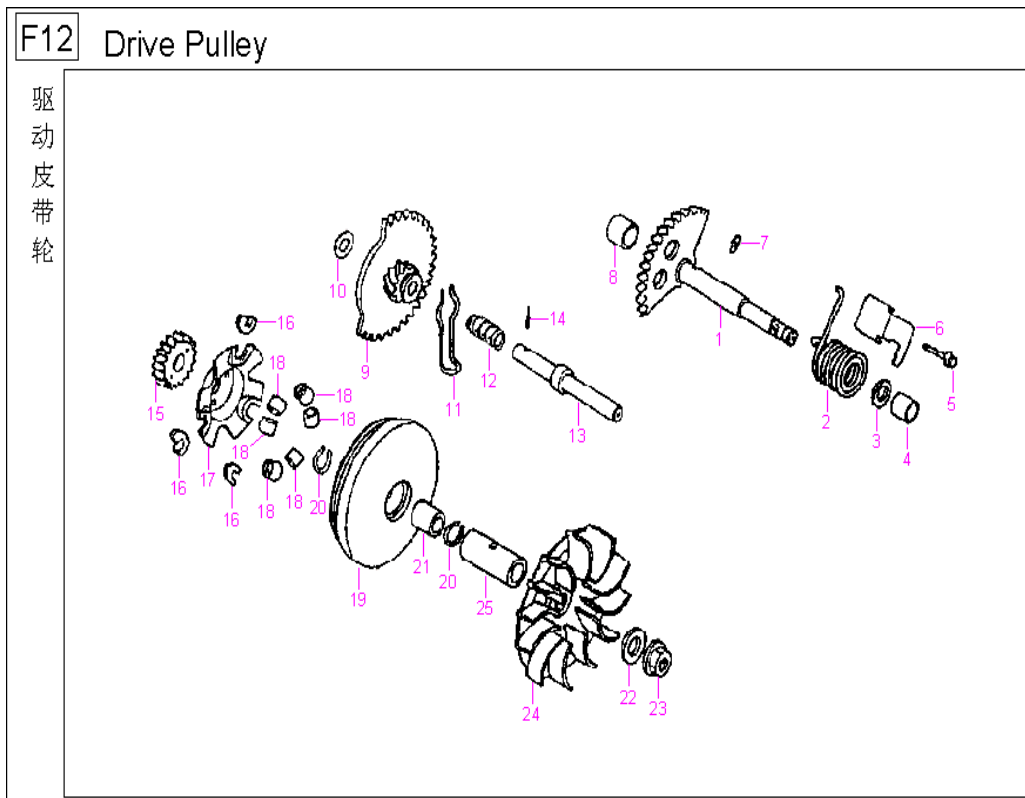


F12 Drive Pulley

NO.	Component and Parts No.	English Name	Quantity
F12/1	117100-152QMI-000	Spindle comp.,kick starter	1
F12/1A	117100A-152QMI-000	Spindle comp.,kick starter(lute style)	1
F12/2	117103-152QMI-000	Spring,kick starter	1
F12/3	117104-152QMI-000	Washer 14	1
F12/4	117102-152QMI-000	Bush,kick spindle	1
F12/5	GB/T 5787-1986	Bolt M6*14	1
F12/6	117131-152QMI-000	Stop board	1
F12/7	117105-152QMI-000	Pin 4.5	1
F12/8	117101-152QMI-000	Bush	1
F12/9	117130-152QMI-000	Start idler	1
F12/10	GB/T 97.1-1985	Washer 12.5	1
F12/11	117132-152QMI-000	Spring	1
F12/12	117133-152QMI-000	Spring,driver shaft	1
F12/13	117134-152QMI-000	Driver shaft,start idler	1
F12/14	117135-152QMI-000	Roller 3*8.5	1
F12/15	116242-152QMI-000	Driven gear	1

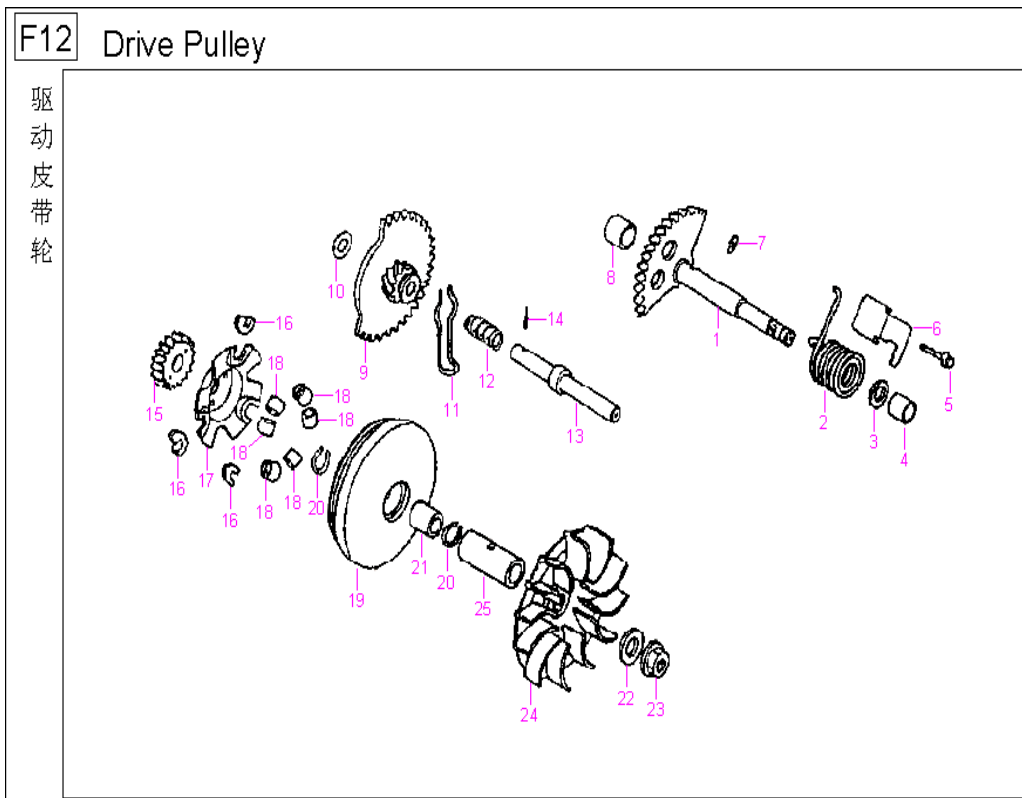


F12 Drive Pulley

NO.	Component and Parts No.	English Name	Quantity
F12/16	116213-152QMI-000	block	3
F12/17	116212-152QMI-000	Plate	1
F12/18	116250-152QMI-000	Roller set	6
F12/19	116211-152QMI-000	Right comp.,driver	1
F12/20	GB/T 894.1-1986	Clip	2
F12/21	116215-152QMI-000	Collar	1
F12/22	GB/T 97.1-1985	Washer 12	1
F12/23	GB/T 6177-1986	Nut M12	1
F12/24	116230-152QMI-000	Left,driver	1
F12/25	116214-152QMI-000	Collar bush	1

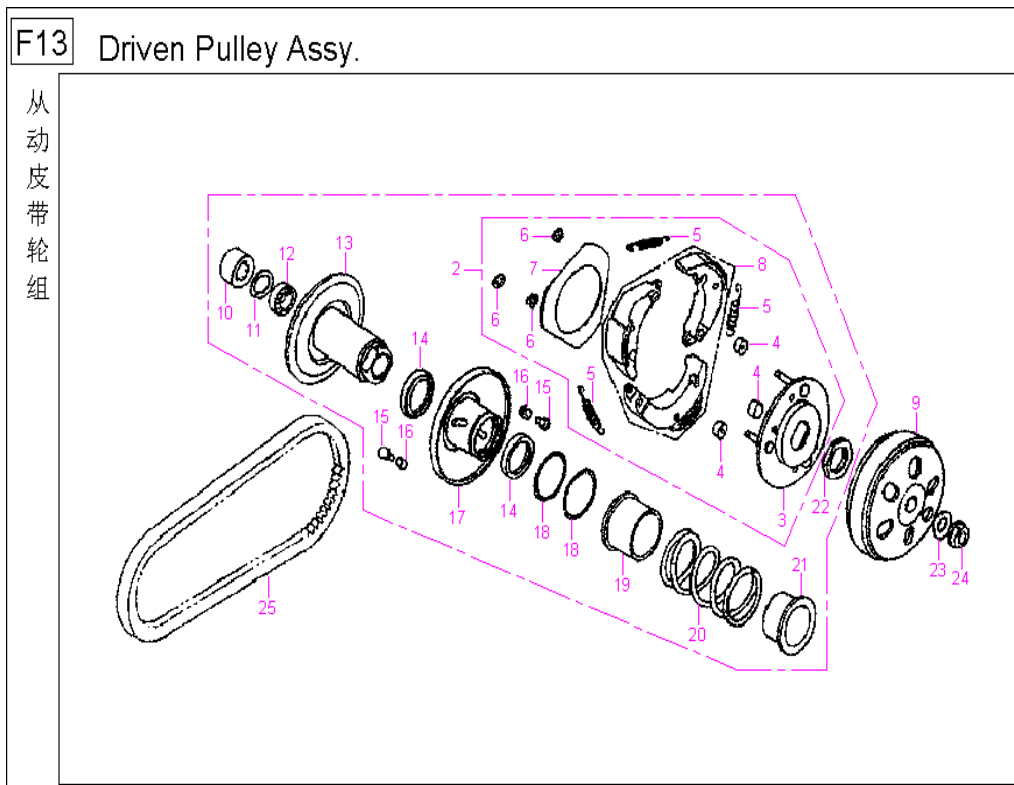


F13 Driven Pulley

NO.	Component and Parts No.	English Name	Quantity
F13/1	116300-152QMI-000	Pulley assy.,driven	1
F13/2	116320-152QMI-000	Plate assy.,driver	1
F13/3	116410-152QMI-000	Plate,driver	1
F13/4	116401-152QMI-000	Rubber,clutch	3
F13/5	116402-152QMI-000	Spring,clutch	3
F13/6	GB/T 896-1986	Circlip 5	3
F13/7	116403-152QMI-000	Side plate,clutch	1
F13/8	116450-152QMI-000	Weight set,clutch	1
F13/9	116310-152QMI-000	Outer plat,clutch	1
F13/10	GB 3038-18	Needle bearing 20*29*18	1
F13/11	GB/T 896-1986	Circlip 5	1
F13/12	GB/T 276-94	Bearing	1
F13/13	116330-152QMI-000	Right comp.,driven	1
F13/14	YF34*41*4	Seal 34*41*4	2
F13/15	116302-152QMI-000	Guiding pin	1
F13/16	116303-152QMI-000	Roller	1
F13/17	116440-152QMI-000	Belt plate,driven	1
F13/18	GB3452.1	O-ring	2
F13/19	116404-152QMI-000	Collar,seal	1
F13/20	116405-152QMI-000	Spring,driver	1
F13/21	116406-152QMI-000	Collar	1
F13/22	116301-152QMI-000	Nut M28	1
F13/23	GB/T 97.1-1985	Washer 12	1
F13/24	GB/T 6177-1986	Nut M12	1
F13/25	116500-152QMI-000	Belt ,driver	1

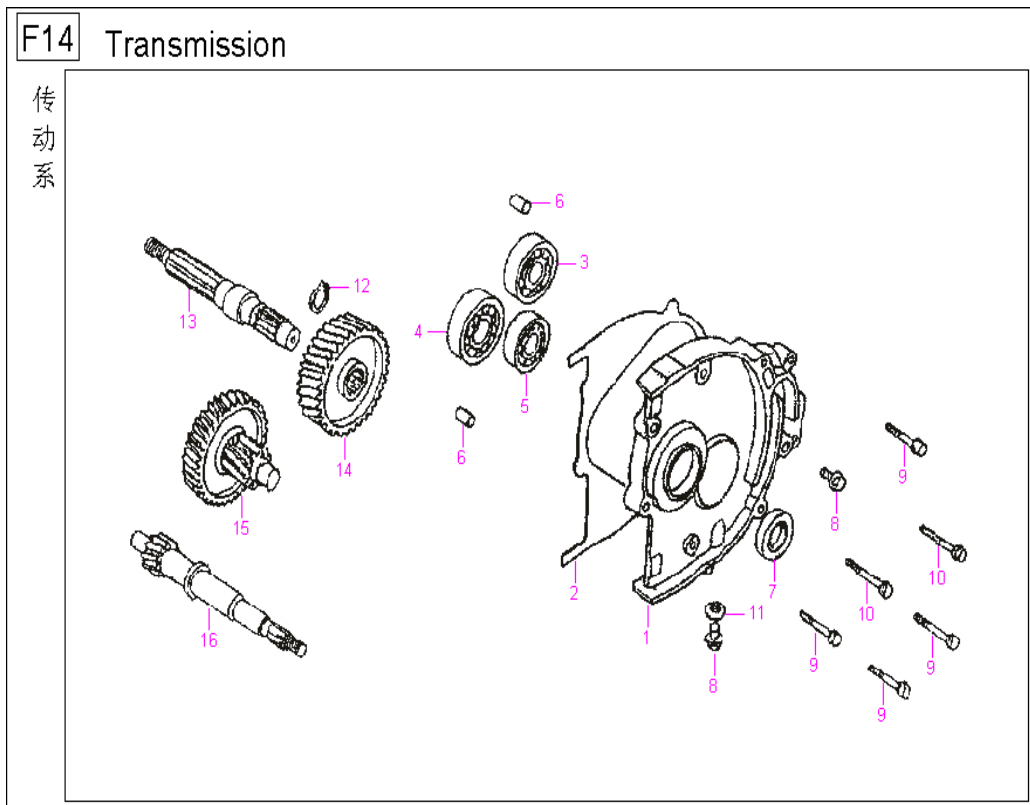


F14 Transmission

NO.	Component and Parts No.	English Name	Quantity
F14/1	117101-152QMI-000	Rear transmission case assy.	1
F14/2	124027-152QMI-000	Gasket, rear transmission case	1
F14/3	GB/T 276-1994	Bearing 6203	1
F14/4	GB/T 276-1994	Bearing 6204	1
F14/5	GB/T 276-1994	Bearing 6202	1
F14/6	DWX 8*6.3*14	Dowel pin	2
F14/7	YF 20*32*6	Oil seal 20*32*6	1
F14/8	GB/T 5787-1986	Bolt M8*12	2
F14/9	GB/T 5787-1986	Bolt M6*28	4
F14/10	GB/T 5787-1986	Bolt M6*35	2
F14/11	GB/T 97.1-1985	Washer 8	1
F14/12	GB896-1986	Circlip 5	1
F14/13	114501-152QMI-000	Output shaft	1
F14/14	114502-152QMI-000	Output gear	1
F14/15	114600-152QMI-000	Middle gear	1
F14/16	114701-152QMI-000	Input shaft	1

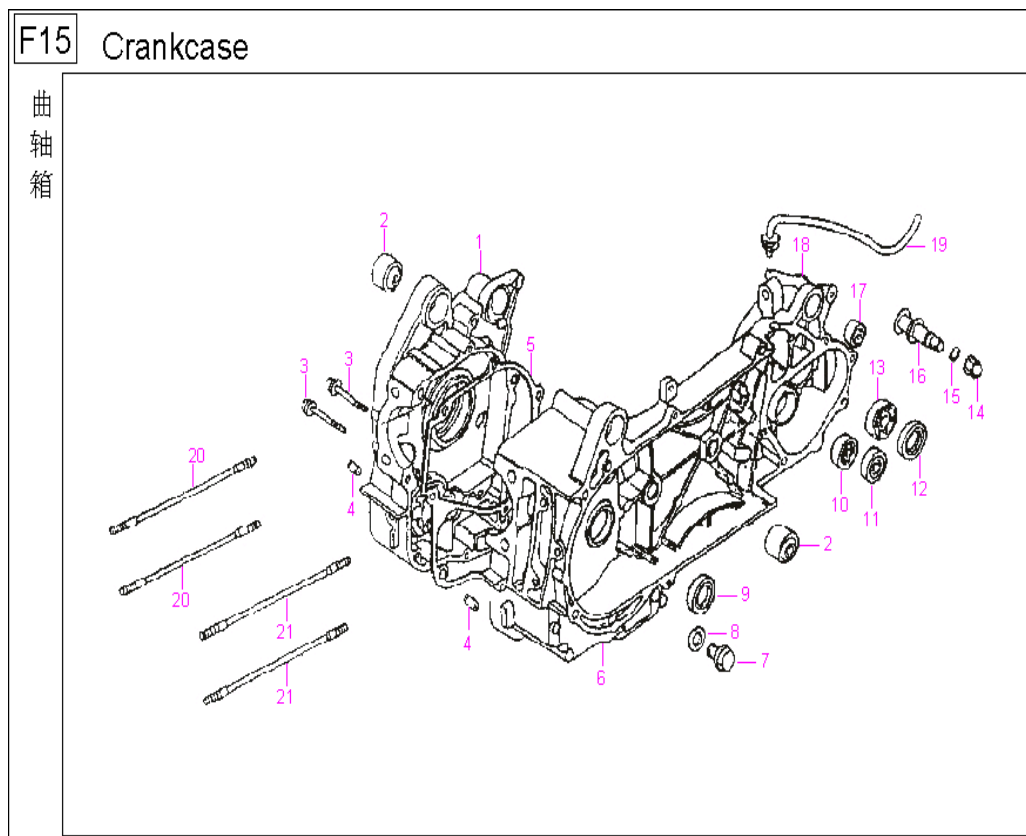


F15 Crankcase

NO.	Component and Parts No.	English Name	Quantity
F15/1	115100-152QMI-000	Right crankcase assy.(drum brake)	1
F15/1	115100-152QMI-000	Right crankcase assy.(disc brake)	1
F15/2	114130-152QMI-000	Bush	2
F15/3	GB/T 5787-1986	Bolt M6*50	2
F15/4	DWX 8*6.3*14	Dowel pin	2
F15/5	124025-152QMI-000	Gasket,crankcase	1
F15/6	114100-152QMI-000	Left crankcase assy.	1
F15/7	114103-152QMI-000	Drain plug	1
F15/8	GB/T 97.1-1985	Washer 12	1
F15/9	YF 19.8*30*5	Oil seal 19.8*30*5	1
F15/10	YF 27*42*7	Oil seal 27*42*7	1
F15/11	GB/T 276-94	Bearing 6301	1
F15/12	GB/T 276-94	Bearing 6002	1
F15/13	GB/T 276-94	Bearing 6004-2RS	1
F15/14	GB/T 6177-1986	Nut M8	1
F15/15	GB3452.1	O-ring	1
F15/16	107102-152QMI-000	Amounting shaft	1
F15/17	104120-152QMI-000	Bush	1
F15/18	107110-152QMI-000	Dust seal	1
F15/19	108710-152QMI-000	Breather tube assy.	1
F15/20	105102-152QMI-000	2-stud bolt M8*187	2
F15/21	104102-152QMI-000	2-stud bolt M8*195	2

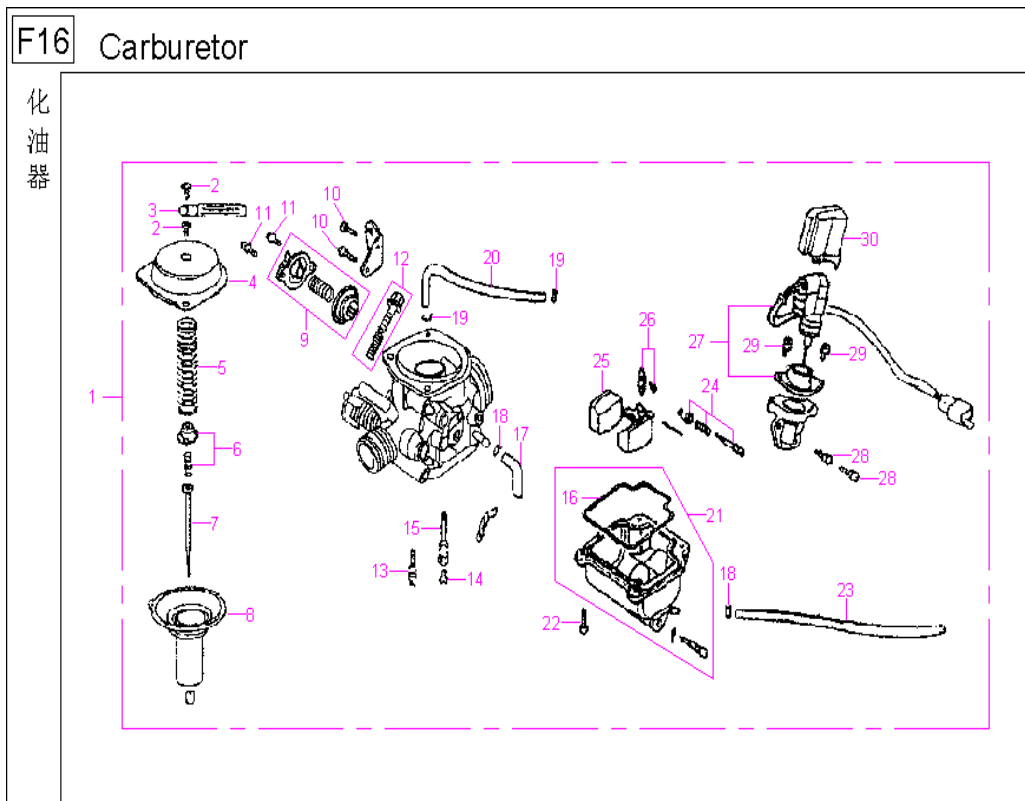


F16 Carburetor

NO.	Component and Parts No.	English Name	Quantity
F16/1	160000-152QMI-000	Carburetor assy.	1
F16/2	GB/T 818-1985	Screw M4*8	2
F16/3	160101-152QMI-000	Plate clip	1
F16/4	160102-152QMI-000	Cap,vacuum piston valve	1
F16/5	160103-152QMI-000	Spring	1
F16/6	160104-152QMI-000	Plate set	1
F16/7	160200-152QMI-000	Oil needle	1
F16/8	160105-152QMI-000	Vacuum piston valve	1
F16/9	160300-152QMI-000	Air block valve	1
F16/10	GB/T 818-1985	Screw M5*12	2
F16/11	GB/T 818-1985	Screw M4*10	2
F16/12	160900-152QMI-000	Screw set A	1
F16/13	160001-152QMI-000	Injecting nozzle 35#	1
F16/14	160002-152QMI-000	Main injecting nozzle 112#	1
F16/15	160003-152QMI-000	Base,oil needle	1
F16/16	160400-152QMI-000	Gasket	1
F16/17	160004-152QMI-000	Air tube	1
F16/18	160005-152QMI-000	Tube clip	2
F16/19	160006-152QMI-000	Tube	2
F16/20	160007-152QMI-000	Rubber tube 3.5*210	1

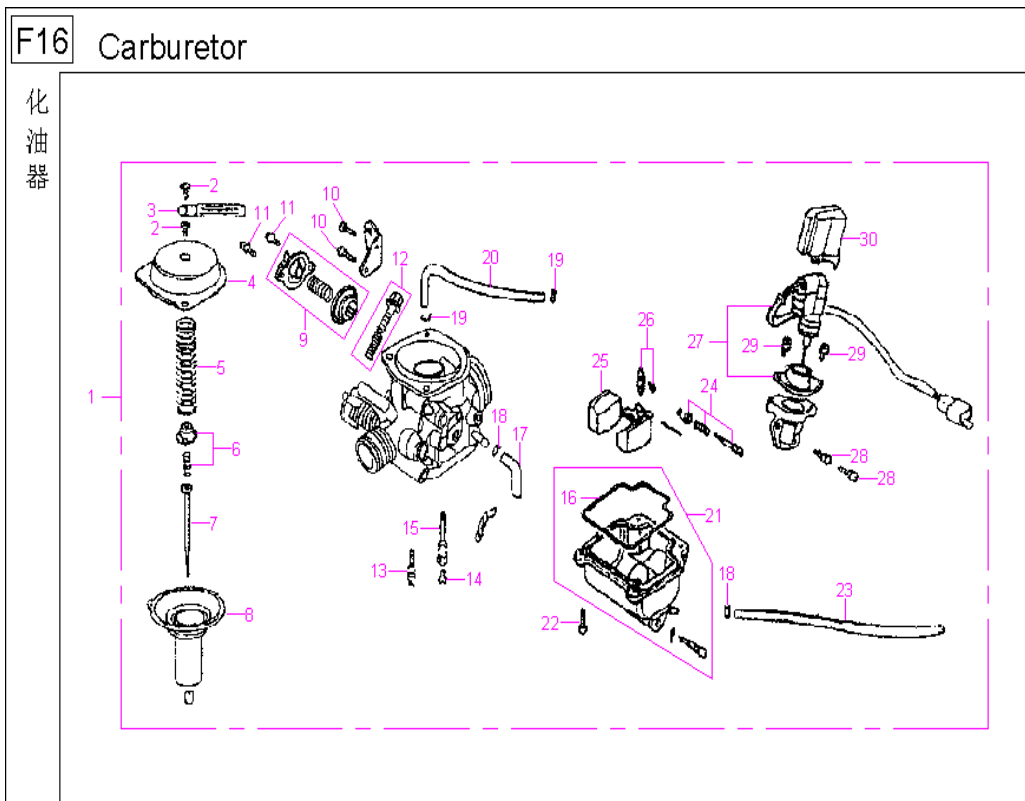

F16 Carburetor

NO.	Component and Parts No.	English Name	Quantity
F16/21	160500-152QMI-000	Float chamber	1
F16/22	GB/T 818-1985	Screw M4*14	1
F16/23	160008-152QMI-000	Overflow tube	1
F16/24	160600-152QMI-000	Screw set B	1
F16/25	160700-152QMI-000	Float canister assy	1
F16/26	160009-152QMI-000	Float canister valve	1
F16/27	160800-152QMI-000	Starting valve set	1
F16/28	GB/T 818-1985	Screw M5*12	2
F16/29	GB/T 818-1985	Screw M4*8	2
F16/30	160801-152QMI-000	Cap,starting valve	1

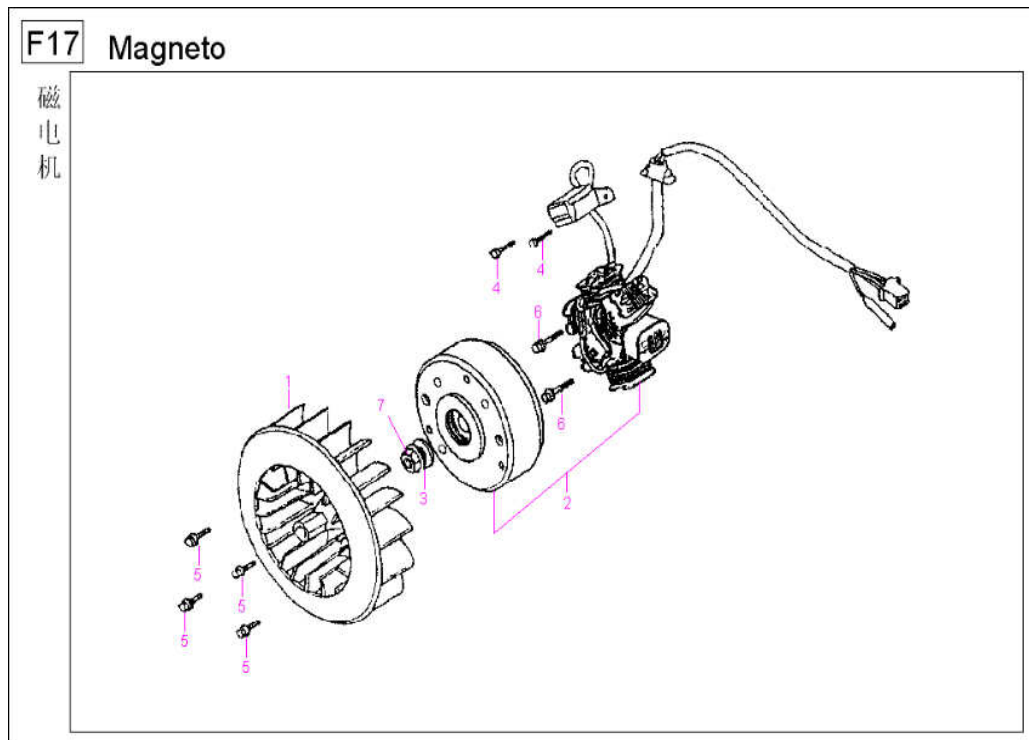


F17 Magneto

NO.	Component and Parts No.	English Name	Quantity
F17/1	108500-152QMI-000	Cooling fan comp.	1
F17/2	120100-152QMI-000	Generator assy.	1
F17/3	GB97.1-10	Washer	1
F17/4	GB/T5787-1985 M5*12	Bolt M5X12	2
F17/5	GB/T5787-1985 M6*16	Bolt M6*16	2
F17/6	GB/T5787-1985 M6*25	Bolt M6*25	4
F17/7	GB/T6187-1986 M10	Nut M12	1


F18 Front wheel(disk brake)

前
轮
(
碟
刹
)

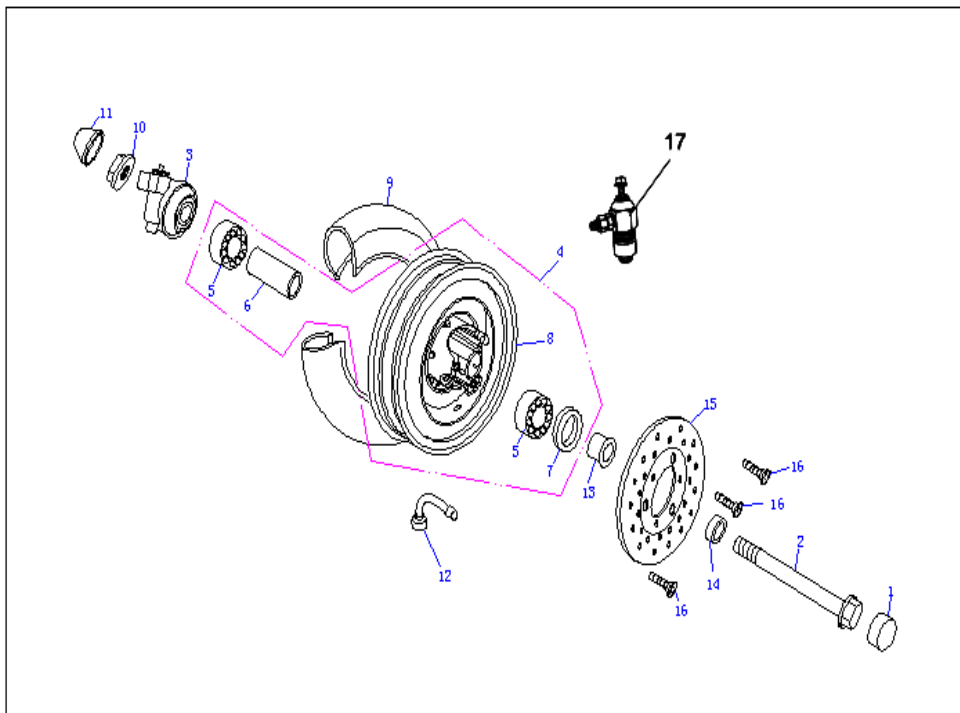


F18 Front wheel (disc brake)

NO.	Component and Parts No.	English Name	Quantity
F18/1	BT50QT-9-060004	Left Rubber cap	1
F18/2	BT49QT-7-060003	Alxe , Front wheel	1
F18/3	BT49QT-7-060200	Arithmometer	1
F18/4	BT50QT-9-060110A	Front rim assy	1
F18/5	GB278	Bearing 6201	2
F18/6	BT49QT-7-060101	Center Set	1
F18/7	BT50QT-9-060120A	Seal dust	1
F18/8	BT50QT-9-060002A	Front rim	1
F18/9	GB/T2983-1997	Type assy 120/40-12	1
F18/10	GB/T6187-1986	Nut M12*1.25	1
F18/11	BT50QT-7-060005	Right rubber cap	1
F18/12	BT49QT-7-060300	Valve	1
F18/13	BT49QT-7-060100	Left bush	1
F18/14	BT49QT-7-060001	Small bush	1
F18/15	BT49QT-7-060002	Brake disc	1
F18/16	404002-TA7-0000	Bolt,brake disc	3
F18/17	BT50QT-7-404400	ABS	1

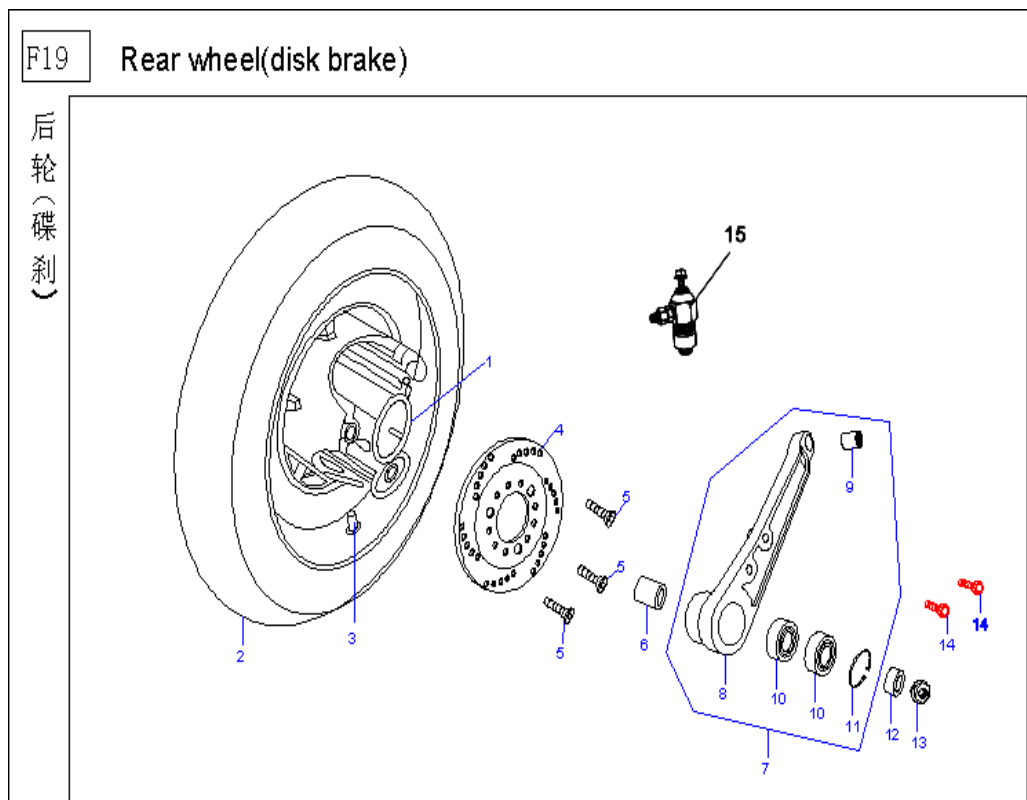


F19 Rear wheel (disk brake)

NO.	Component and Parts No.	English Name	Quantity
F19/1	BT125-T-2-402110	Rear rim	1
F19/2	GB/T2983-W-130/70-12	Tyre 130/70-12	1
F19/3	BT125T-2-401120	Valve	1
F19/4	BT125T-2-406001	Brake disc	1
F19/5	BT125T-2-406002	Bolt	3
F19/6	BT125T-2-402203	Long bush	1
F19/7	BT125T-2-402200	Mourting boerd assy.,disk drake	1
F19/8	BT125T-2-402201	Mourting boerd ,rear disk brake	1
F19/9	BT125T-2-402204	Bush	1
F19/10	BT125T-2-GB278-6203Z	Bearing 6203Z	2
F19/11	BT125T-2-GB893.1-1986	Cirdip	1
F19/12	BT125T-2-TA7-0000	Short bush	1
F19/13	BT125T-2-GB6187-M16*1.5	Nut	1
F19/14	BT125T-2-GB/T5789-1986	Bolt M8*28	2
F19/15	BT50QT-7-404400	ABS	1

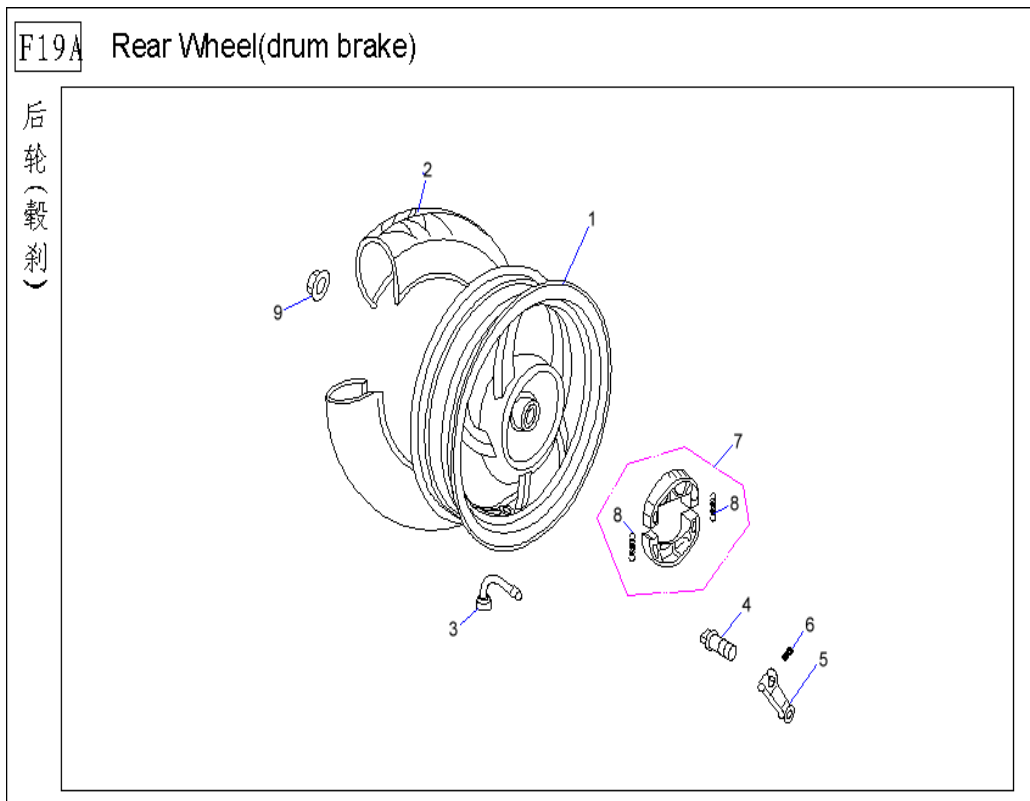

F19A Rear wheel (drum brake)

NO.	Component and Parts No.	English Name	Quantity
F19A/1	BT125T-2-402110	Rear rim	1
F19A/2	BT125T-2-GB/T2983-W-3.50-10	Tyre 3.50-10	1
F19A/3	BT125T-2-401120	Vale	1
F19A/4	BT125T-2-405001	Rear brake cam	1
F19A/5	BT125T-2-405010	Rear brake lever	1
F19A/6	BT125T-2-GB/T5780-1986	Bolt M6*35	1
F19A/7	BT125T-2-405100	Brake shoe assy	1
F19A/8	BT125T-2-405101	Spring	2
F19A/9	BT125T-2-GB/T6187-1986	Nut,self-lockM16*1.5	1

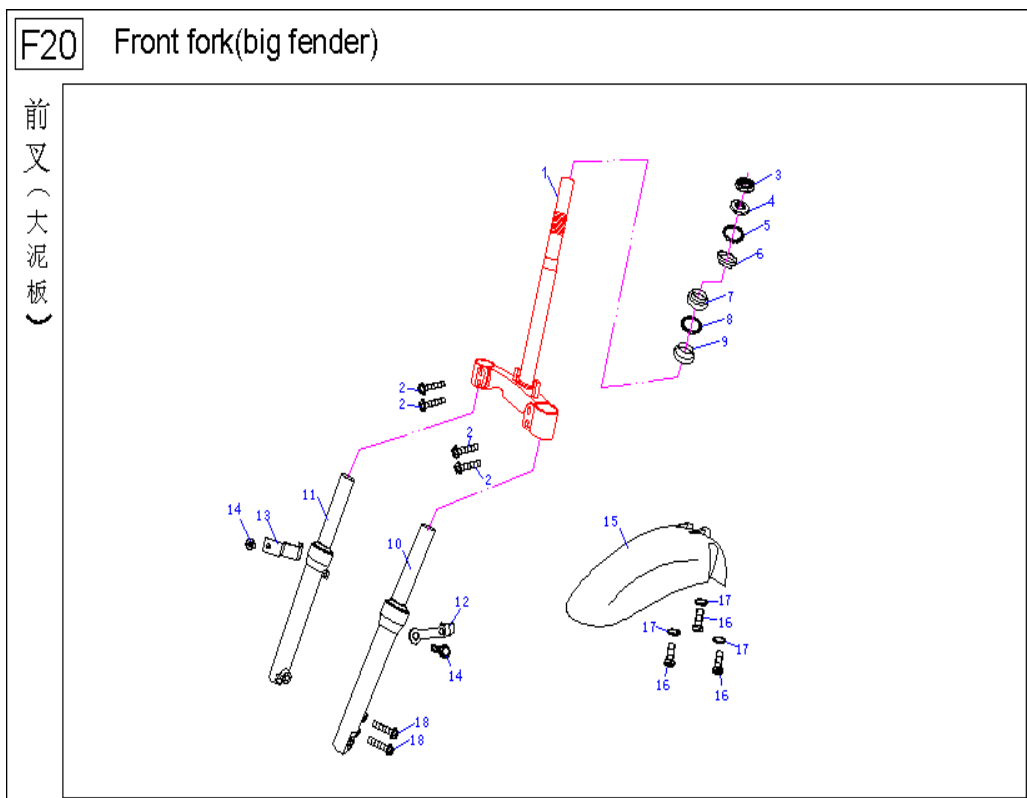


F20 Front fork

NO.	Component and Parts No.	English Name	Quantity
F20/1	BT49QT-7-080200	Steering column welding assy	1
F20/2	GB/T 5789-1986	Bolt flange M8*45	4
F20/3	BT50QT-9-080001	Assembling nut , steering column	1
F20/4	BT50QT-9-080302	Race strg upper cone	1
F20/5	BT50QT-9-080310	Steel ball assy upper	1
F20/6	BT50QT-9-080301	Race Upper Strg Ball	1
F20/7	BT50QT-9-080401	Race Under Strg Ball	1
F20/8	BT50QT-9-080410	Bsteel ball assy,nether	1
F20/9	BT50QT-9-080402	Race Strg nether Cone	1
F20/10	BT49QT-7-080110	Front Cushion Assy . (L)	1
F20/11	BT49QT-7-080120	Front Cushion Assy . ®	1
F20/12	BT49QT-7-080003	Clip , oil tube	1
F20/13	BT49QT-7-080004	Clip , odometer tube	1
F20/14	GB/T5789-1986	Bolt flange M6*12	2
F20/15	BT49QT-7-150001	Front Fender	1
F20/16	GB/T818-1985	Bolt M5*16	3
F20/17	GB/T97.1-1985	Washer ϕ6	3
F20/18	GB/T5789-1986	Bolt Flange M8*35	2

F21 Center stand assy./Side stand assy.

主
支
架

侧
支
架

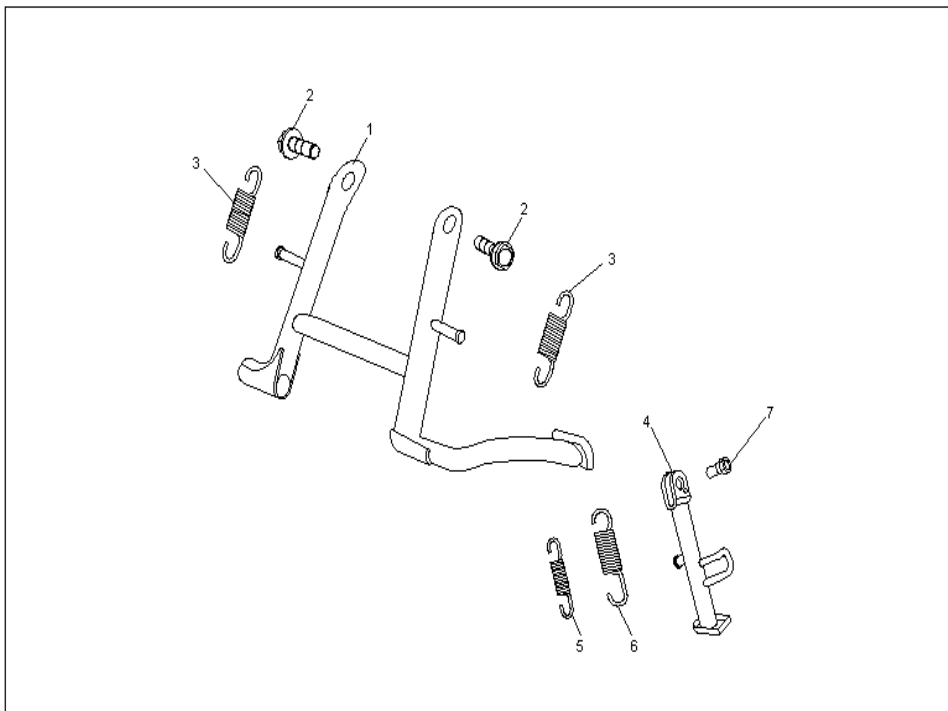


F21 Center stand assy. /Side stand assy.

NO.	Component and Parts No.	English Name	Quantity
F21/1	BT125T-2-090300	Center stand assy .	1
F21/1A	BT125T-2-090300A	Center Stand Assy .(high)	1
F21/2	GB/T5789-1986	Bolt M10*25	2
F21/3	BT50QT-9-000502	Spring , center stand	2
F21/4	BT125T-2-090200	Side stand welding assy .	1
F21/5	BT50QT-9-090004	Spring , Side Stand	1
F21/6	BT50QT-9-090005	Spring , Side Stand	1
F21/7	BT49QT-7-090003	Bolt , Side Stand	1

F22 Rear shock absorber

后
减
震
器

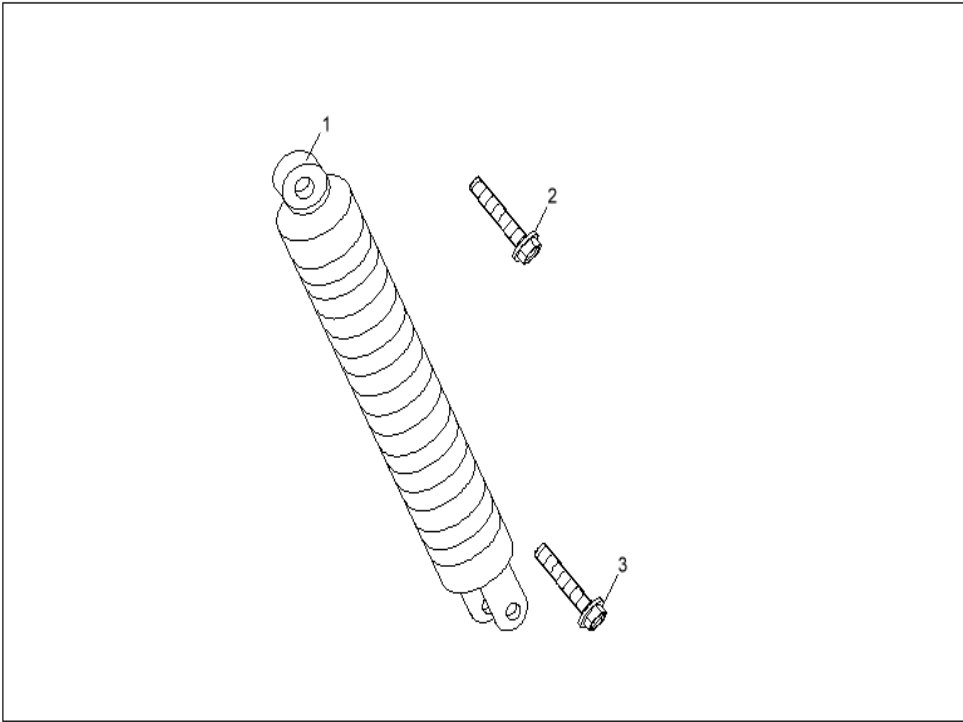


F22 Rear shock absorber

NO.	Component and Parts No.	English Name	Quantity
F22/1	BT49QT-7-380100	Rear shock absorber (disk brake)	1
F22/2	GB/T5789-1986	Bolt flange M10*45	1
F22/3	GB/T5783-1986	Bolt fFlange M8*35	1

F23 Wire harness

主
电
缆

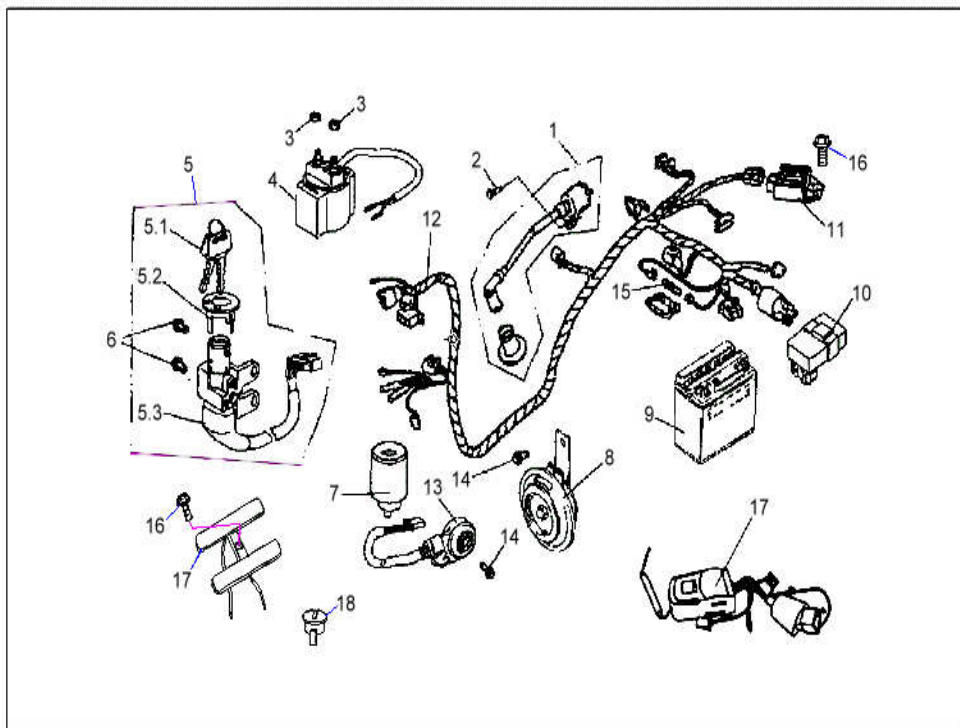


F23 Wire harness

NO.	Component and Parts No.	English Name	Quantity
F23/1	BT50QT-9-180600	Coil assy Ignition	1
F23/2	GB/T818-1985	Bolt M6*20	1
F23/3	GB/T6177-1986	Nut M6	2
F23/4	BT50QT-9-180400	Switch assysarter magnetic	1
F23/5	BT49QT-7-180900	Lgnition switch assy	1
F23/6	GB/T5783-1986	Bolt M6*16	2
F23/7	BT50QT-9-180700	Flicker relay	1
F23/8	BT50QT-9-181000	Horn	1
F23/9	BT50QT-11-181200	Battery(YT7X-BS)	1
F23/9A	305100-TJ9-0100	Battey(YT9X-BS)	1
F23/10	BT50QT-9-180500	CDI	1
F23/11	BT50QT-9-180300	Rectifier	1
F23/12	BT50QT-9-180100	Wire harness	1
F23/13	BT50QT-9-181800	(Off) Switch assy	1
F23/14	GB/T5789-1986	Bolt M6*16	2
F23/15	BT50QT-9-180201	Fuse	1
F23/16	GB/T5789-1986	Bolt M6*16	2
F23/17	BT50QT-9-180900	Remote control	1
F23/5.1	BT49QT-7-180901	Key	1
F23/5.2	BT49QT-7-180902	Ignition switch cap	1
F23/5.3	BT49QT-7-180903	Ignition switch	1
F23/5.4	BT49QT-7-181100	Front luggage box lock	1
F23/5.5	BT49QT-9-181000	Seat Lock	1


F24 Headlight assy.

前照灯

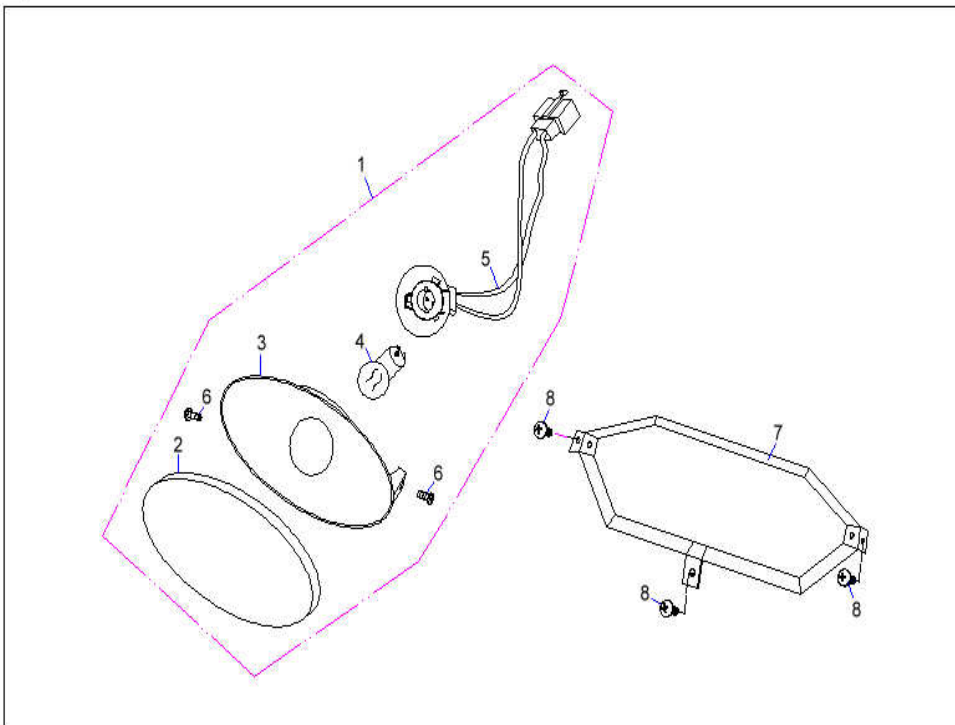


F24 Head light assy

NO.	Component and Parts No.	English Name	Quantity
F24/1	BT49T-7-180200	Fr.headlight assy	1
F24/2	BT49T-7-180210	Lampshade Fr.headlight	1
F24/3	BT49T-7-180230	Crust,Fr.headlight	1
F24/4	320110-TA7-0000	Bulb,Fr.headlight	1
F24/5	BT49T-7-180240	Lamp Socket Fr.headlight	1
F24/6	GB/T818-1985	Bolt M5*8	2
F24/7	BT49T-7-181200	Bracket Fr . Head Light	1
F24/8	GB/T845-1985	Screw Tapping ST4.2*13	3

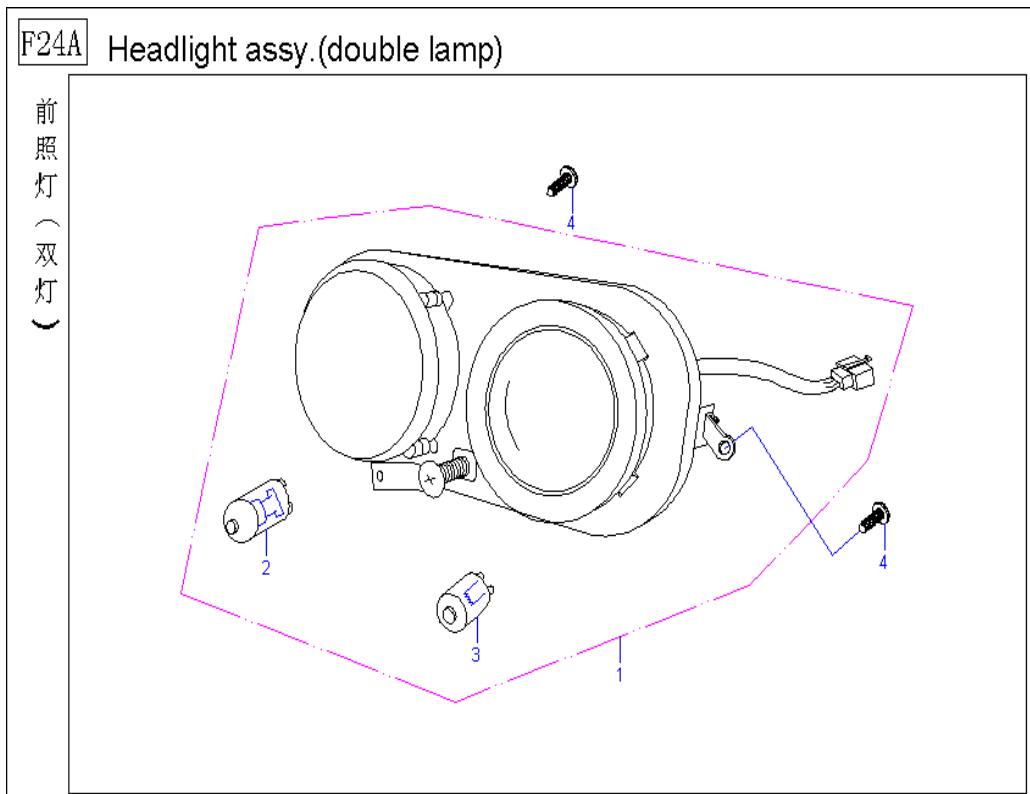


F24A Operating system (Double lamp)

NO.	Component and Parts No.	English Name	Quantity
F24A/1	320100-TA7-0100	Headlight assy	1
F24A/2	320110-TA7-0100	Bulb,high beam	1
F24A/3	320190-TA7-0100	Bulb,low beam	1
F24A/4	GB/T845-1985	Screw-tapping ST4.2*13	2

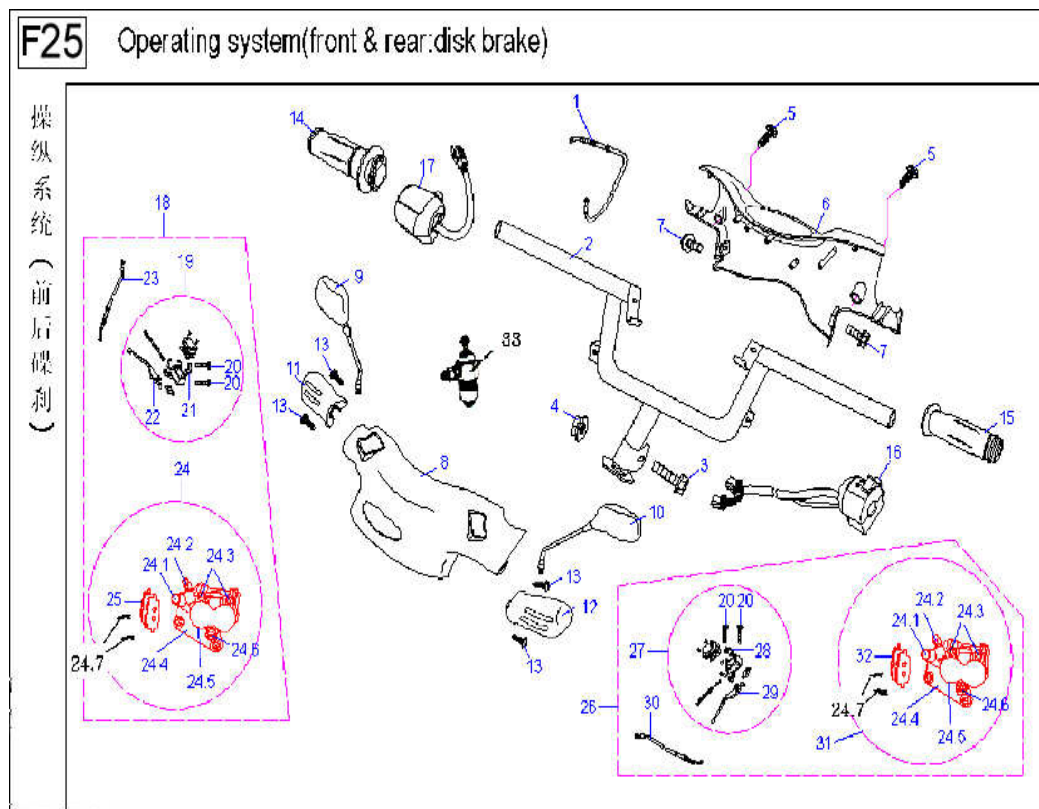


F25 Operating system (Front and rear disk brake)

NO.	Component and Parts No.	English Name	Quantity
F25/1	BT50QT-7-110300	Throtte link assy .	1
F25/2	BT50QT-7-110100	Direction handle	1
F25/3	GB/T 5789-1986	Bolt M10*45	1
F25/4	GB/T 6187-1986	Nut M10*1.25	1
F25/5	GB/T 845-1985	Screw Tapping ST4.2*16	2
F25/6	BT49QT-7-160002	Rear Part , Head Cover	1
F25/7	GB/T 5789-1986	Bolt Flange M6*12	2
F25/8	BT49QT-7-160001	Front Part , Head Cover	1
F25/9	BT50QT-9-110300	R. mirror	1
F25/10	BT50QT-9-110200	L.mirror	1
F25/11	BT49QT-7-160004	R.grip cover	1
F25/12	BT49QT-7-160003	L.grip cover	1
F25/13	GB/T845-1985	Screw Tapping ST4.2*13	4
F25/14	BT50QT-9-110400	Crip throttle assy .	1
F25/15	BT50QT-9-110001	Left grip	1
F25/16	BT50QT-9-181200	L. handle switch assy .	1
F25/17	BT50QT-9-181300	R. handle switch assy .	1
F25/18	BT49QT-7-140000	Front disk brake assy.	1
F25/19	BT49QT-7-140100	Master oil cylinder assy .	1
F25/20	GB/T5787-1986	Bolt M6*22	4
F25/21	BT49QT-7-140101	Bracket , master cylinder	1
F25/22	BT49QT-7-140101	Front brake handle	1
F25/23	BT49QT-7-140200	Front oil hose assy	1

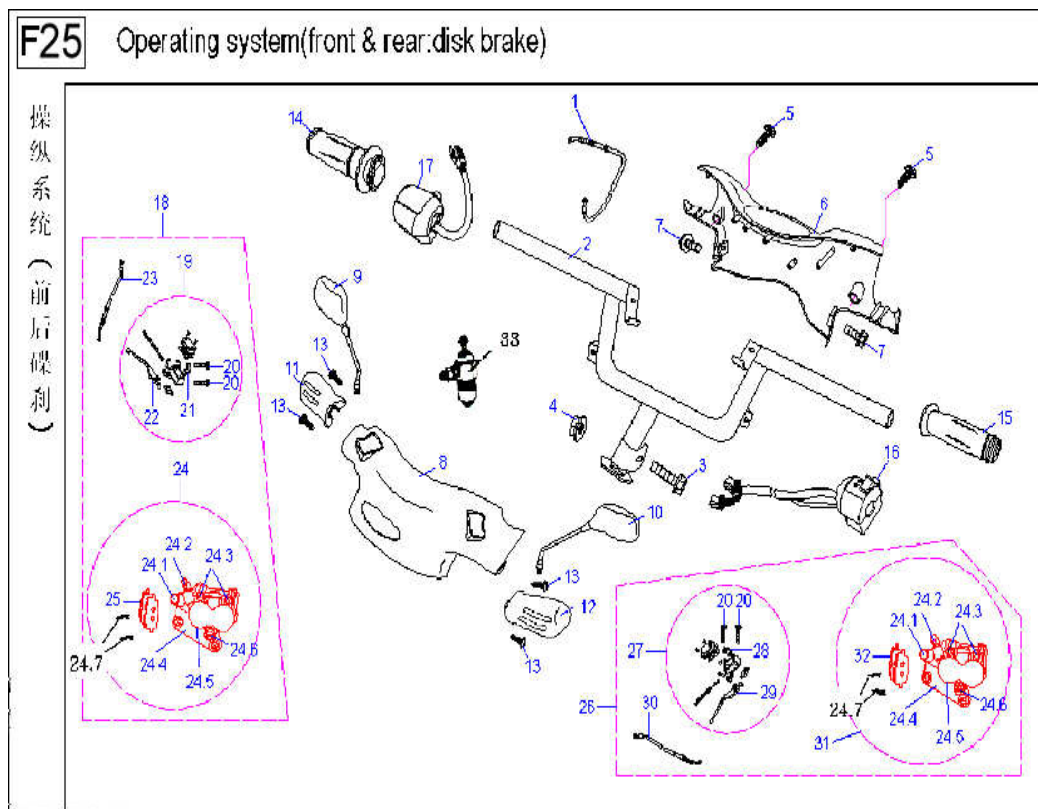


F25 Operating system (Front and rear disk brake)

NO.	Component and Parts No.	English Name	Quantity
F25/24	BT49QT-7-140300	Front brake caliper assy	1
F25/24.1	BT125T-2-340301	Direction rod	1
F25/24.2	BT125T-2-340306	Bolt	
F25/24.3	BT125T-2-340305	BoltM8*25	2
F25/24.4	BT125T-2-340320	Install stand Comp.	1
F25/24.5	BT125T-2-340310	Caliper assy.(fr)	1
F25/24.6	BT125T-2-340303	Direction rod	1
F25/24.7	BT125T-2-340304	Spring, torsion	2
F25/25	BT49QT-7-140310	Front brake shoe assy	1
F25/26	BT125T-2-340000	Rear disk brake assy	1
F25/27	BT125T-2-340100	Rear Master oil cylinder assy	1
F25/28	BT125T-2-340101	Rear bracket ,master cylinder	1
F25/29	BT125T-2-340102	Rear brake handle	1
F25/30	BT125T-2-340200	Rear oil hose assy	1
F25/31	BT125T-2-340300	Rear caliper assy	1
F25/32	BT125T-2-340310	Brake Shoe Assy . (Rear)	1
F25/33	BT125T-2-404400		

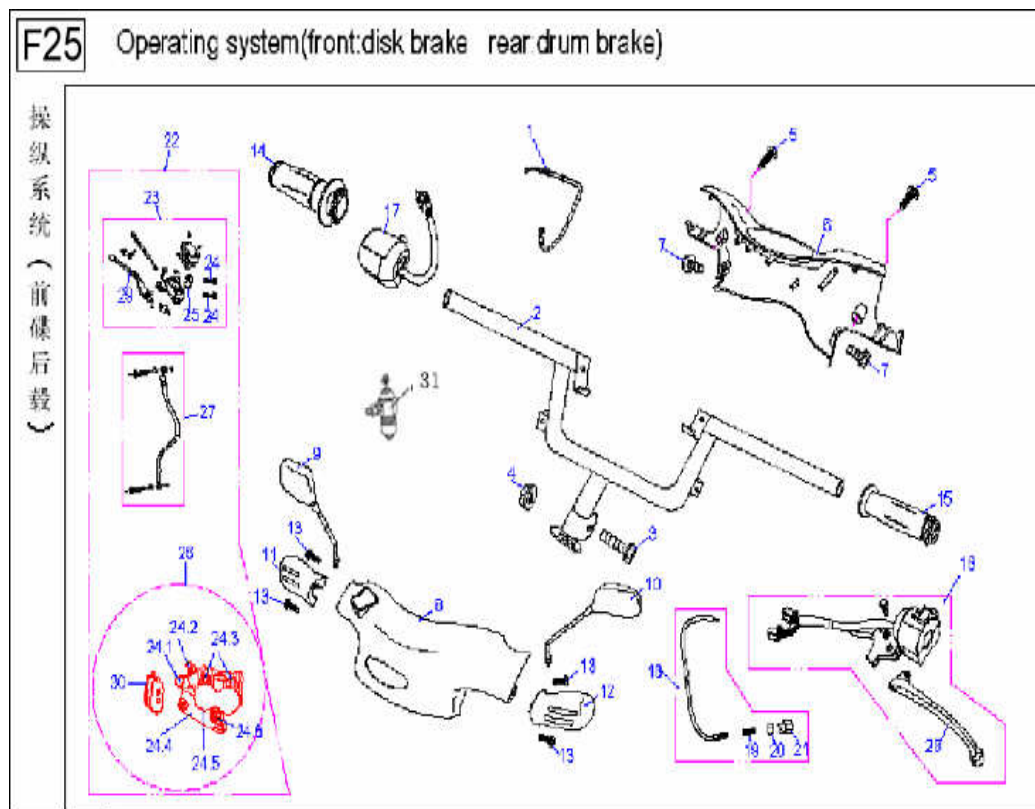


F25 Operating system (Front disk brake and rear drum brake)

NO.	Component and Parts No.	English Name	Quantity
F25/1	BT49QT-7-110300	Throttle Link Assy	1
F25/2	BT49QT-7-110100	Direction Handle	1
F25/3	GB/T5789-1986	Bolt M10*45	1
F25/4	GB/T6187-1986	Nut M10*1.25	1
F25/5	GB/T845-1985	Screw Tapping ST4.2*16	2
F25/6	BT49QT-7-160002	Rear Part Head Cover	1
F25/7	GB/T5789-1986	Bolt Flange M6*12	2
F25/8	BT49QT-7-160001	Front Part Head Cover	1
F25/9	BT50QT-9-110300	R. Mirror Comp Back	1
F25/10	BT50QT-9-110200	L. Mirror Comp Back	1
F25/11	BT49QT-7-160004	R. Protect Mulch	1
F25/12	BT49QT-7-160003	L. Protect Mulch	1
F25/13	GB/T845-1985	Screw Tapping ST4.2*13	4
F25/14	BT50QT-9-110400	Crip Throttle Assy	1
F25/15	BT50QT-9-110001	Left Grip	1
F25/16	BT49QT-7-181200	Left Handle Switch Assy	1
F25/17	BT49QT-7-181300	R. Handle Switch Assy	1
F25/18	BT49QT-7-110200	Rear Brake Link Assy	1
F25/19	BT49QT-7-110201	Sprign	1

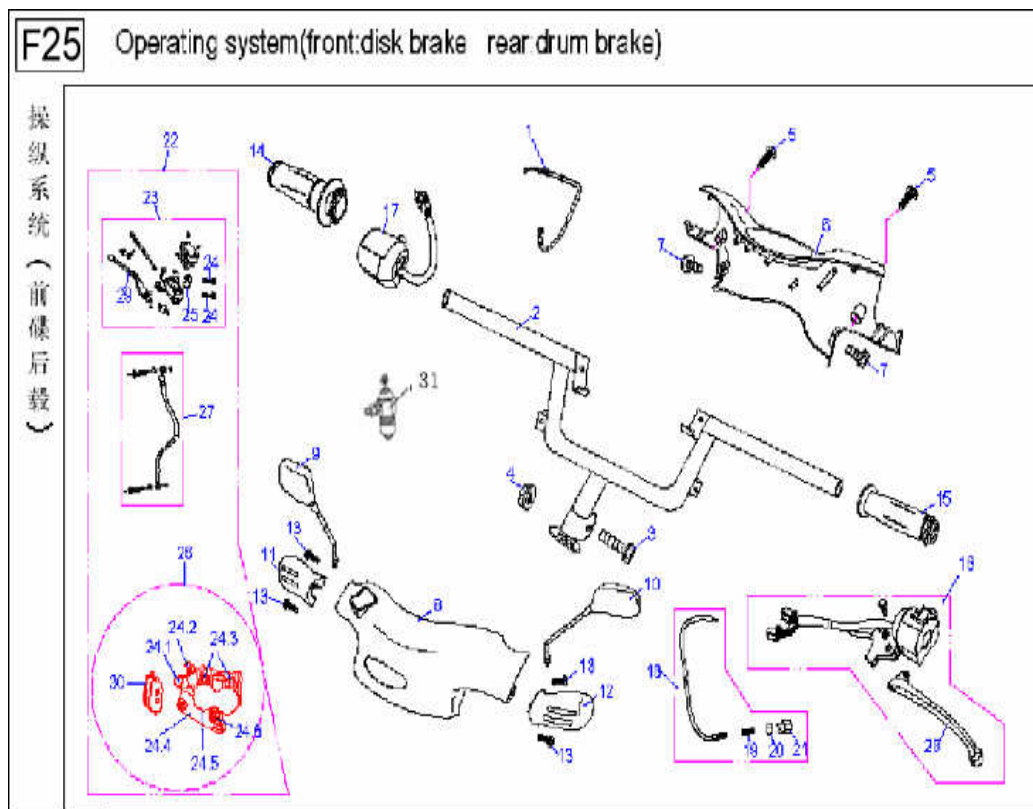


F25 Operating system (Front disk brake and rear drum brake)

NO.	Component and Parts No.	English Name	Quantity
F25/20	BT49QT-7-110202	Join	1
F25/21	BT49QT-7-110203	Nut , Adjust	1
F25/22	BT49QT-7-140000	Disk Brake Assy	1
F25/23	BT49QT-7-140100	Master Oil Cylinder Assy	1
F25/24	GB/T5787-1986	Bolt M6*22	2
F25/25	BT49QT-7-140101	Bracket Master Cylinder	1
F25/26	BT49QT-7-140300	Caliper Assy	1
F25/27	BT49QT-7-140200	Brake Hose Assy	1
F25/28	BT49QT-7-140201	L. Brake Handle	1
F25/29	BT49QT-7-140101	R. Brake Handle	1
F25/30	BT49QT-7-140310	Brake Shoe Assy	1

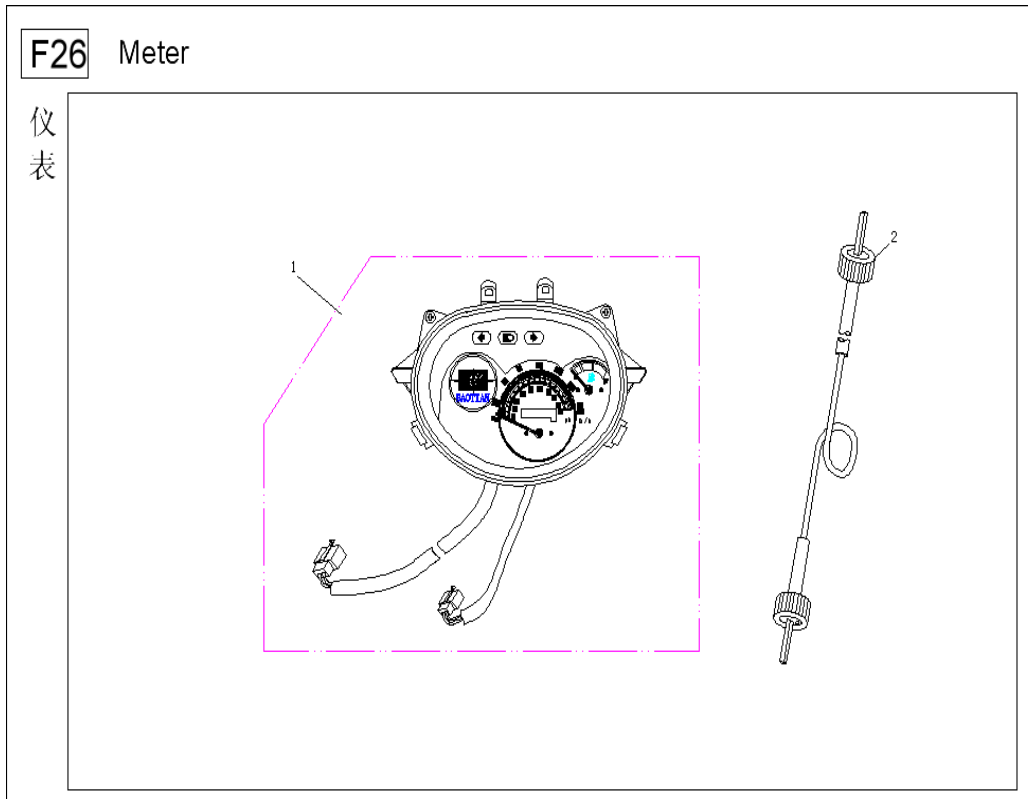

F26 Meter assy

NO.	Component and Parts No.	English Name	Quantity
F26/1	BT49QT-7-190100	Mater assy.	1
F26/2	BT49QT-7-190200	Odometer tube	1

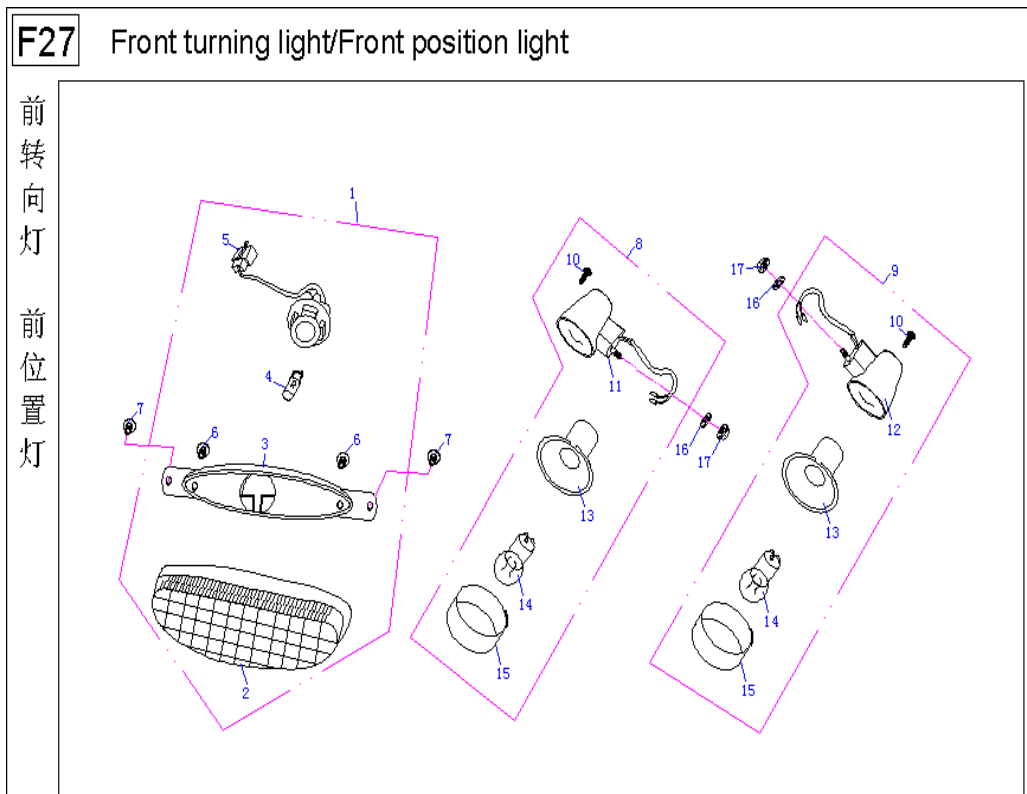


F27 Front winker / Front Position light

NO.	Component and Parts No.	English Name	Quantity
F27/1	BT49QT-7-190300	Fr . Position light	1
F27/2	BT49QT-7-190301	Lampshade,Fr.position light(white)	1
F27/2A	BT49QT-7-190301A	Lampshade,Fr.position light(yellow)	1
F27/3	BT49QT-7-190302	Housing,,Fr.positon light	1
F27/4	BT49QT-7-190303	Bulb Fr.position light	1
F27/5	BT49QT-7-190310	Socket Fr position light	1
F27/6	GB/T845-1985	Screw Tapping ST4.2*12	2
F27/7	GB/T845-1985	Screw Tapping ST4.2*13	2
F27/8	BT49QT-7-180500	Front turning light ®	1
F27/9	BT49QT-7-180400	Front turning light .L	1
F27/10	GB/T5282-1985	Screw Tapping ST2.9*25	2
F27/11	BT49QT-7-180410	Crust,Fr.turning light®	2
F27/12	BT49QT-7-180401	Crust,Fr.turning light L	2
F27/13	BT49QT-7-180402	Lamp-socket,Fr turnung light	2
F27/14	BT49QT-7-180403	Bulb turning light	2
F27/15	BT49QT-7-322131	Lampshade,Fr.position light(white)	2
F27/15A	BT49QT-7-322131A	Lampshade,Fr.position light(yellow)	2
F27/16	GB/T97.1-1985	Washer 5	2
F27/17	GB/T6170-1986	Nut M5	2


F28 Rear turning light

后
转
向
灯

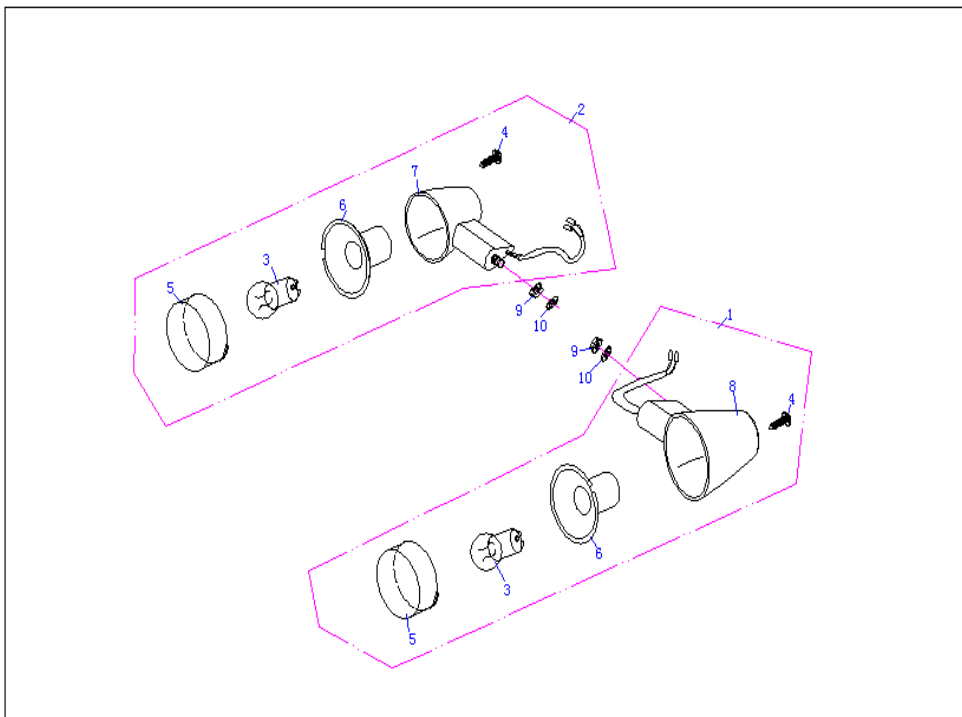

F28 Rear turning light

NO.	Component and Parts No.	English Name	Quantity
F28/1	BT49QT-7-180600	Rear turning light . (L)	1
F28/2	BT49QT-7-180700	Rear turning light . (R)	1
F28/3	BT49QT-7-180601	Bulb,turning light	2
F28/4	GB/T5282-1985	Screw Tapping ST2.9*25	2
F28/5	BT49QT-7-180602	Lampshade rear turning light	2
F28/6	BT49QT-7-180603	Lamp-socket,rear turning light	2
F28/7	BT49QT-7-180610	Crust,rear turning light(L)	1
F28/8	GB/T6170-1986	Crust,rear turning light(R)	1
F28/9	GB/T6170-1986	Nut M5	2
F28/10	GB/T97.1-1985	Washer 5	2

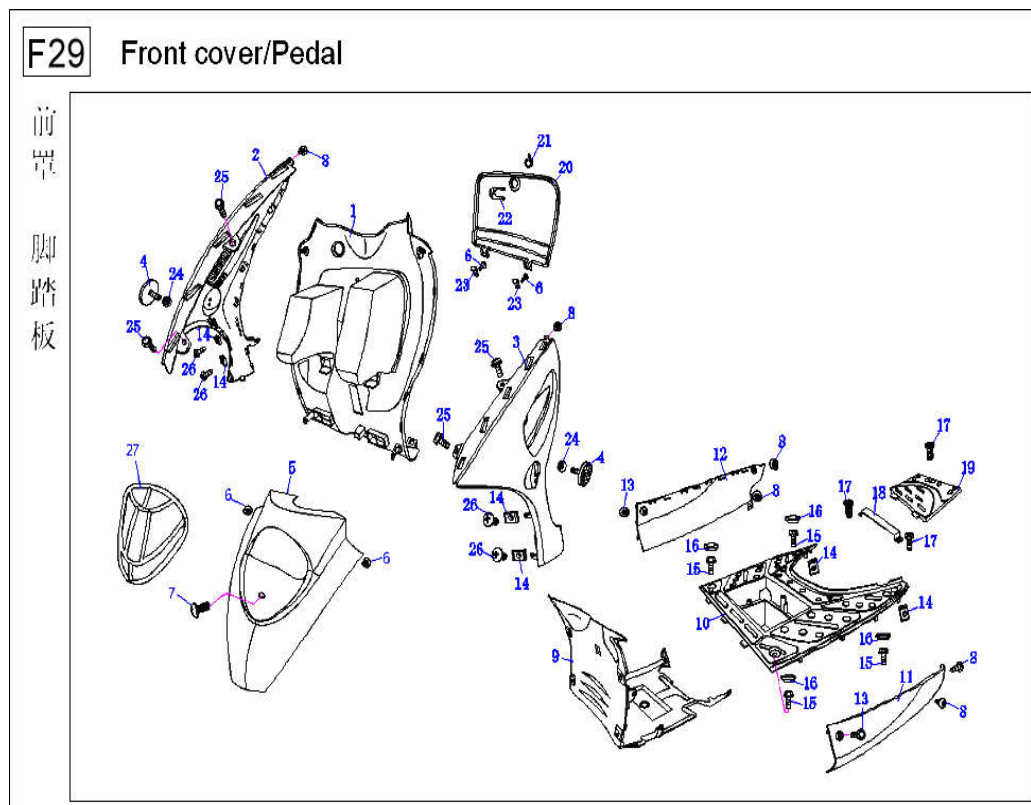


F29 Front Cover / Floor Pedal

NO.	Component and Parts No.	English Name	Quantity
F29/1	BT49QT-7-030001	FR . Luggage Box	1
F29/2	BT49QT-7-030007	Protect Cover Fr . Luggage Box ®	1
F29/3	BT49QT-7-030006	Protect Cover Fr . Luggage Box(L)	1
F29/4	BT50QT-11-050003	Side reflector	2
F29/5	BT49QT-7-020001	Front cover	1
F29/6	GB/T845-1985	Screw Tapping ST4.2*16	4
F29/7	GB/T818-1985	ScrewM6*12	1
F29/8	GB/T845-1985	Screw Tapping S4.2*13T	6
F29/9	BT49QT-7-090012	Bottom fender	1
F29/10	BT49QT-7-050001	Pedal	1
F29/11	BT49QT-7-070001	Left Side Cover	1
F29/12	BT49QT-7-070002	Right Side Cover	1
F29/13	GB/T818-1985	Bolt M6*12	2
F29/14	BT50QT-9-050007	Clip (4.2)	6
F29/15	GB/T5789-1986	Bolt M6*20	4
F29/16	BT49QT-7-050004	Rubber ,cap	4
F29/17	GB/T818-1985	Bolt M5*12	3
F29/18	BT49QT-7-050003	Battery Pressing bar	1
F29/19	BT49QT-7-050002	Battery Box Cover	1
F29/20	BT49QT-7-030002	Cover, Fr . Luggage Box	1
F29/21	BT49QT-7-181100	Lock , Fr . Luggage Box	1
F29/22	BT49QT-7-181101	Fixation Patch , Lock	1
F29/23	BT49QT-7-030009	Clip , Fr . Luggage Box Cover	2
F29/24	GB/T6177-1986	Nut M6*12	2
F29/25	GB/T5789-1986	Bolt M6*12	4
F29/26	GB/T845-1985	Screw Tapping ST4.8*13	4
F29/27	BT49QT-7-020009	Front cover	1

F30 Body cover/Luggage box


车
体
盖

置
物
箱

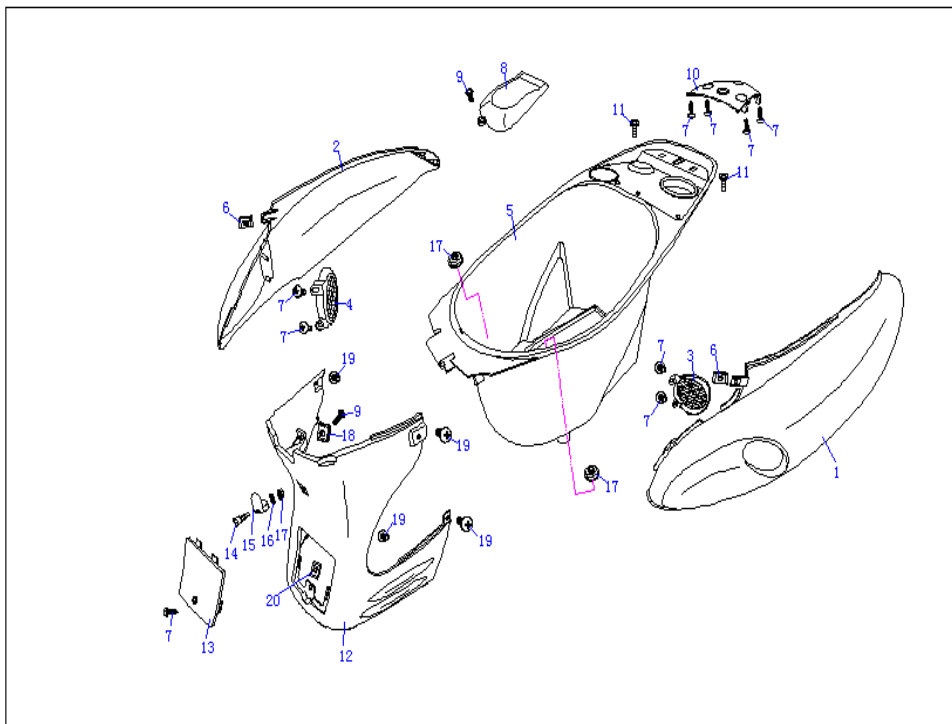

F30 Body cover / Luggage box

NO.	Component and Parts No.	English Name	Quantity
F30/1	BT49QT-7-070201	Cover , Left Body Side	1
F30/2	BT49QT-7-070301	Cover ., Right Body Side	1
F30/3	BT49QT-7-070203	Ventilating cover ,left boby side	1
F30/4	BT49QT-7-070303	Ventilating cover ,right boby side	1
F30/5	BT49QT-7-040001	Rear luggage box	1
F30/6	BT49QT-7-010003	Clip (ST4.2)	2
F30/7	GB/T845-1985	Screw Tapping ST4.8*13	9
F30/8	BT49QT-7-040002	Inner Cover luggage Box	1
F30/9	GB/T818-1985	Bolt M6*16	2
F30/10	BT49QT-7-070101	Rear Tail Cover	1
F30/11	GB/T5789-1986	Bolt M6*12	2
F30/12	601203-TA7-0000	Fr ., Cover Luggage Box	1
F30/13	BT49QT-7-010001	Cover Luggage Box Fr ., Cover	1
F30/14	BT49QT-7-010002	Ladder Bolt M6*16	1
F30/15	BT49QT-7-010003	Hook , Helmet	1
F30/16	GB/T97.1-1985	Washer 10	1
F30/17	GB/T6177-1986	Nut M6	3
F30/18	BT49QT-7-010008	Clip Nut M6	1
F30/19	GB/T845-1985	Screw Tapping ST4.2*13	4
F30/20	821048	Clip(ST4.8)	1

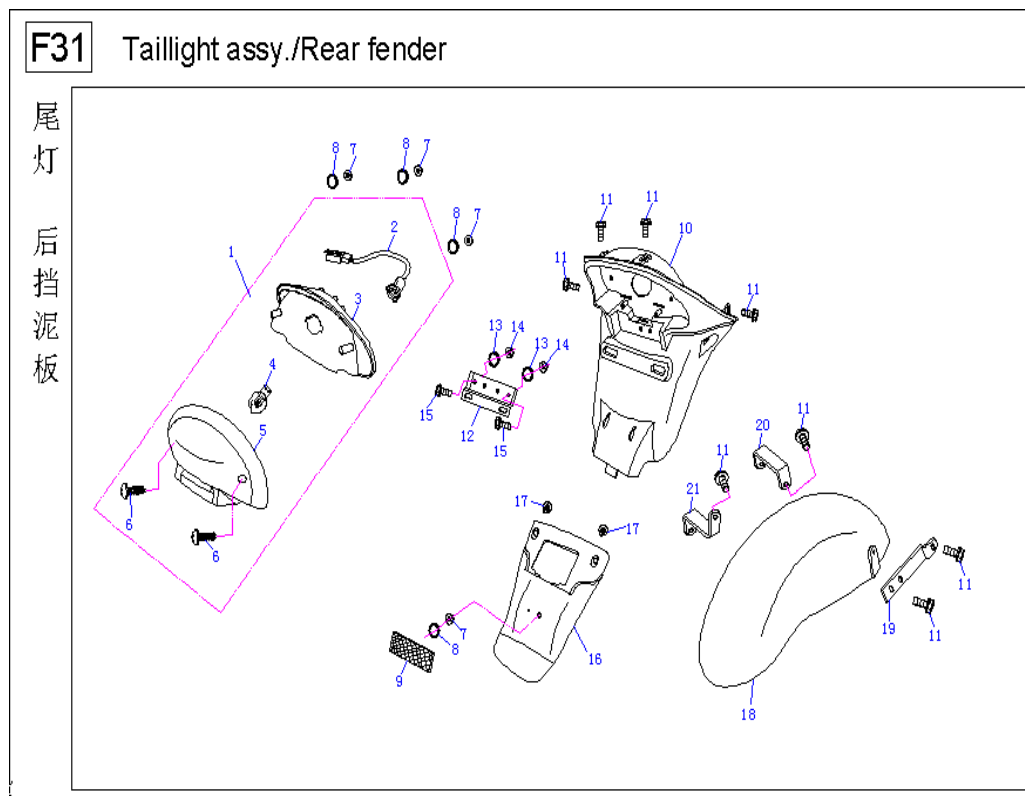


F31 Tail light assy./ Rear fender assy.

NO.	Component and Parts No.	English Name	Quantity
F31/1	BT49QT-7-180800	Taillight	1
F31/2	BT49QT-7-180810	Lamp-socket, taillight	1
F31/3	BT49QT-7-180820	Crust, taillight	1
F31/4	BT49QT-7-180801	Bulb ,taillight	1
F31/5	BT49QT-7-180830	Lampshade ,taillight	1
F31/6	GB/T845-1985	Screw Tapping ST4.2*16	2
F31/7	GB/T6170-1986	Nut M5	4
F31/8	GB/T97.1-1985	Washer 5	4
F31/9	BT50QT-11-350100	Rear Refector	1
F31/10	BT49QT-7-350001	Upper part Rear fender	1
F31/11	GB/T5789-1986	Bolt M6*12	8
F31/12	BT49QT-7-350100	Rear License Plate Frame	1
F31/13	GB/T96-1985	Washer 6	2
F31/14	GB/T6177-1986	Nut M6	2
F31/15	GB/T5789-1986	Bolt M6*16	2
F31/16	BT49QT-7-350002	Under part Rear fender	1
F31/17	GB/T845-1985	Screw Tapping ST4.2*13	2
F31/18	BT49QT-7-370001	Fender ,rear wheel	1
F31/19	BT49QT-7-370002	R.frame ,rear wheel fender	1
F31/20	BT49QT-7-370003	L.front frame ,rear wheel fender	1
F31/21	BT49QT-7-370004	L.rear frame ,rear wheel fender	1


F32 Fuel tank

油箱

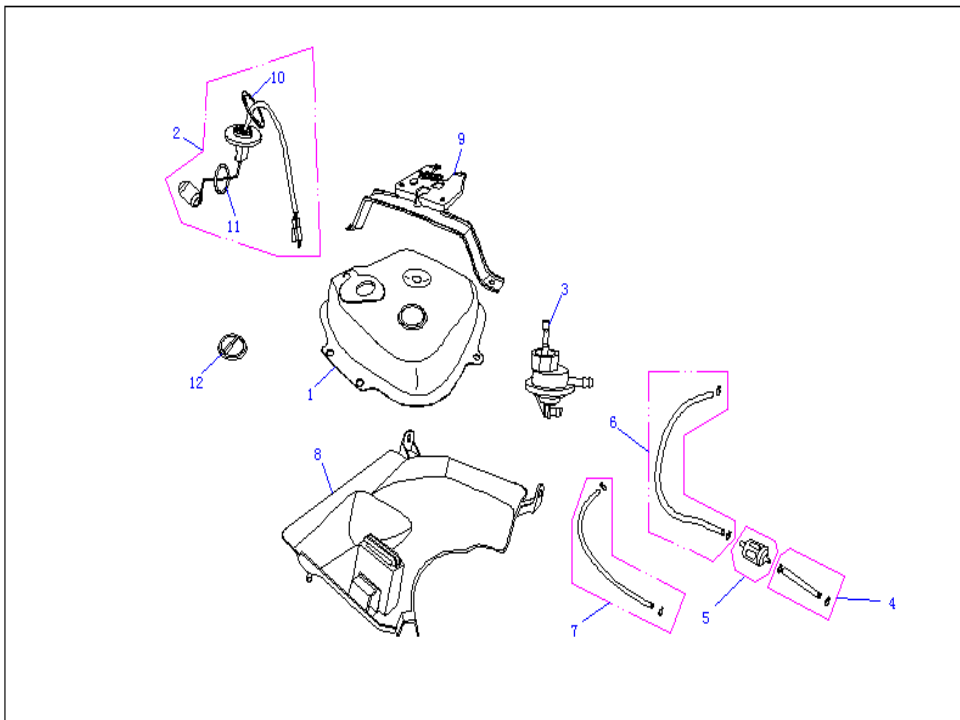

F32 Fuel tank

NO.	Component and Parts No.	English Name	Quantity
F32/1	BT49QT-7-100100	Fuel Tank	1
F32/2	BT49QT-7-100300	Fuel Transducer	1
F32/3	BT50QT-7-100400	Switch, fuel	1
F32/4	BT50QT-7-100001	Fuel Tube B	1
F32/5	BT50QT-7-100500	Fuel Strainer	1
F32/6	BT50QT-7-100003	Fuel Tube A	1
F32/7	BT50QT-7-100002	Vacuum tube	1
F32/8	BT49QT-7-090013	Bottom Cover , Fuel Tank	1
F32/9	BT49QT-7-090300	Lock bracket welding assy	1
F32/10	515202-TA7-0000	Cover, transducer	1
F32/11	BT49QT-7-100304	Seal ring, transducer	1
F32/12	BT49QT-7-100305	Cover ,fuel tank hatch	1

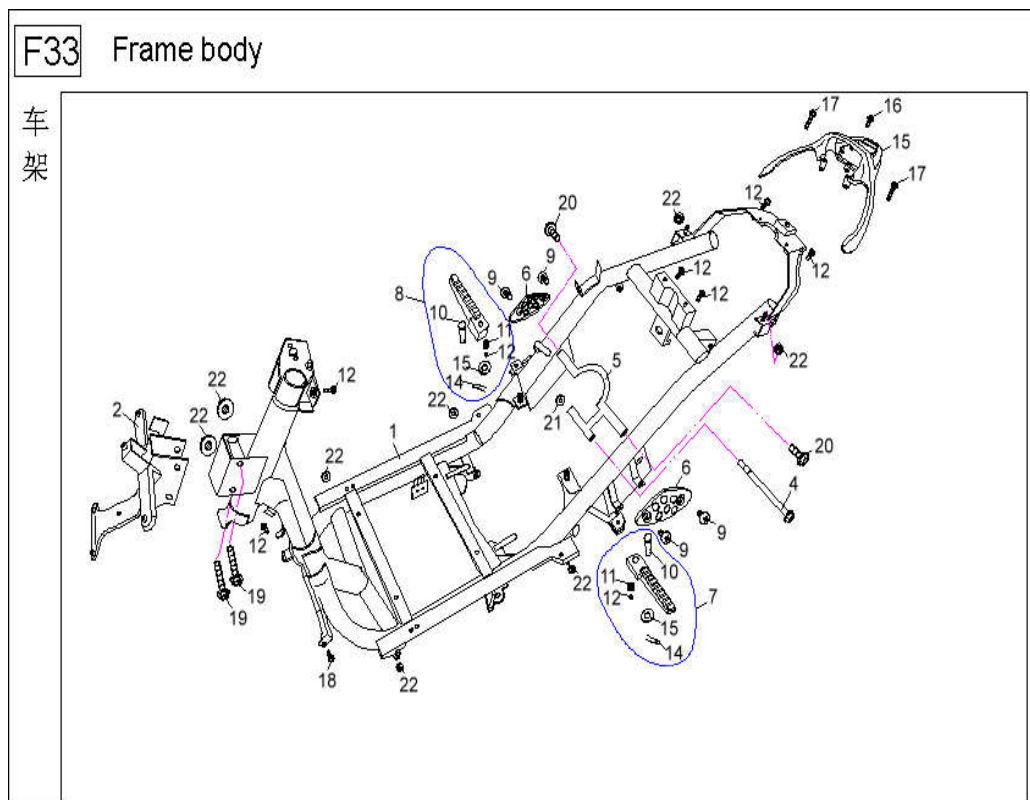


F33 Frame body

NO.	Component and Parts No.	English Name	Quantity
F33/1	BT125T-2-090100	Frame Body Welding Assy .	1
F33/2	BT49QT-7-090490	Horn Body Welding Assy .	1
F33/3	BT49QT-7-090400	Hanger Comp ., Engine	1
F33/4	BT49QT-7-090001	Shaft Hanger Comp.	1
F33/5	BT49QT-7-090006	Adorn Cover L	1
F33/6	BT49QT-7-090007	Adorn Cover R	1
F33/7	BT49QT-7-090008	Put Feet Perch L	1
F33/8	BT49QT-7-090009	Put Feet Perch R	1
F33/9	GB/T818-1985	Bolt M6*12	4
F33/10	GB/T882-1986	Pin Spindle 6*32	2
F33/11	BT49QT-7-090010	Sping , Put Feet Perch	2
F33/12	BT49QT-7-090011	Steel Globe , Put Feet Perch	2
F33/13	GB/T95-1985	Washer 6	2
F33/14	GB/T91-1986	Hatch Pin	2
F33/15	BT49QT-7-330100	Luggage Carrier	1
F33/16	GB/T70-1985	Bolt M8*35	1
F33/17	GB/T70-1985	Botl M8*45	2
F33/18	GB/T5789-1986	Bolt M6*12	7
F33/19	GB/T5789-1986	Bolt M6*50	2
F33/20	GB/T5789-1986	Bolt M10*55	2
F33/21	GB/T6177-1986	Nut M10	1
F33/22	GB/T6177-1986	Nut M6	8

F34 Muffler Welding Assy

排气消声器

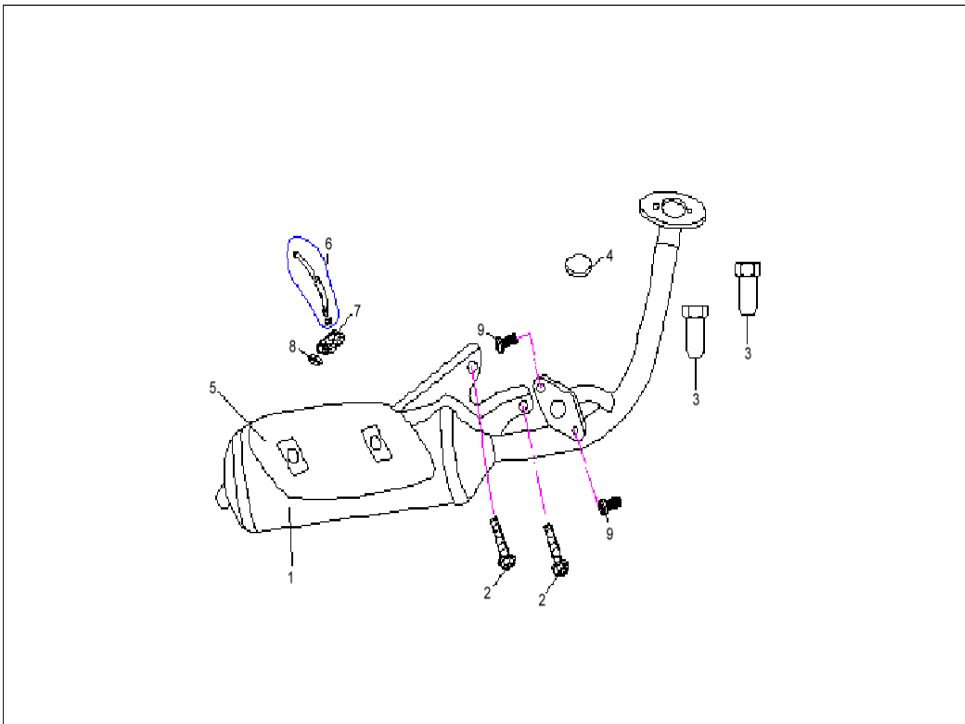


F34 Muffler welding assy.

NO.	Component and Parts No.	English Name	Quantity
F34/1	BT125T-2-120100	Muffler Welding Assy	1
F34/2	GB/T5789-1986	Bolt M8*48	1
F34/3	GB/T923-1988	Nut M6*35	1
F34/4	BT50QT-9-120200	Gasket	1
F34/5	BT125T-2-120200	Protect Plate	1
F34/6	BT49QT-7-120004	Tube	2
F34/7	BT50QT-9-120300	Control Valve	1
F34/8	182220-TA9-0000	Paper gasket	1
F34/9	GB/T818-1985	Bolt M6*12	1


F35 Rear shock absorber board

双后减震联板

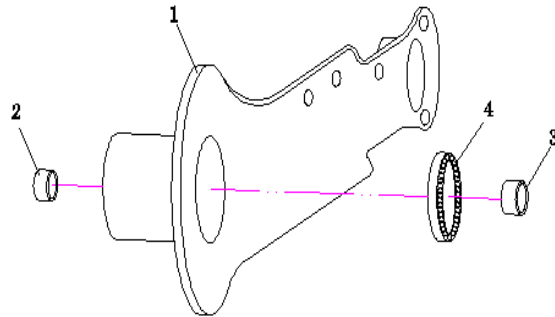

F35 Rear shock absorber board


NO.	Component and Parts No.	English Name	Quantity
F35/1	BT125T-2-390100	Rear shock absorber board	1
F35/2	BT125T-2-390001	Bushing (Inner)	1
F35/3	BT125T-2-390002	Bushing (Outer)	1
F35/4	6302Z	Bearing6302	1

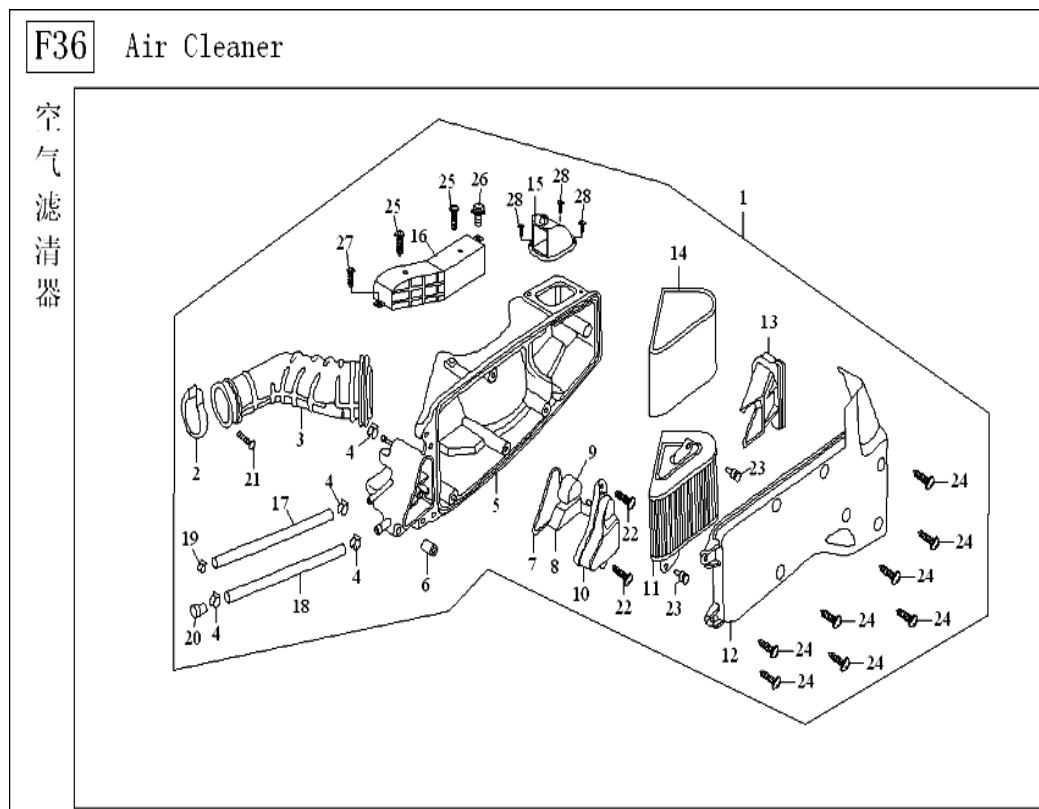

F36 Air cleaner

NO.	Component and Parts No.	English Name	Quantity
F36/1	BT125T-9-780100	Case Assy . Air Cleaner	1
F36/2	BT125T-9-780101	Band Connecting ,Tube	1
F36/3	BT125T-9-780102	Connecting Tube	1
F36/4	BT125T-9-780103	Clamp Tube (D10.5)	4
F36/5	BT125T-9-780104	Casw Air Cleaner	1
F36/6	BT125T-9-780105	Collar Air Cleaner Setting	2
F36/7	BT125T-9-780106	Seal Oil Catch	1
F36/8	BT125T-9-780107	Filter Oil Catch	1
F36/9	BT125T-9-780108	Filter Breather	1
F36/10	BT125T-9-780109	Cover Assy . Oil Catch	1
F36/11	BT125T-9-780110	Element Comp . Air Cleaner	1
F36/12	BT125T-9-780111	Cover Air Cleaner	1
F36/13	BT125T-9-780112	Duct Air Cleaner In	1
F36/14	BT125T-9-780113	Sponge , Element Comp	1
F36/15	BT125T-9-780114	Duct Air Cleaner Case	1
F36/16	BT125T-9-780200	Air Cleaner In Comp	1
F36/17	BT125T-9-780115	Tube Vinyl 8*12*240	1
F36/18	BT125T-9-780116	Tube	1
F36/19	BT125T-9-780117	Clip Tube	1
F36/20	BT125T-9-780118	Plug Breather Tube	1
F36/21	GB/T818-1985	Screw Pan M4*25	1
F36/22	GB/T845-1985	Self -Tapping Screw ST4.2*13	2
F36/23	GB/9074.14	Screw -Washer M5*10	2
F36/24	GB/T845-1985	Self -Tapping Screw ST4.8*20	8
F36/25	GB/T845-1985	Self -Tapping Screw ST4.8*25	2
F36/26	GB/T818-1985	Screw Pan M5*12	1
F36/27	GB/T845-1985	Self -Tapping Screw ST3.5*13	1

F36/28	GB/T5283-1985	Self -Tapping Screw ST2.9*9.5	3
--------	---------------	-------------------------------	---

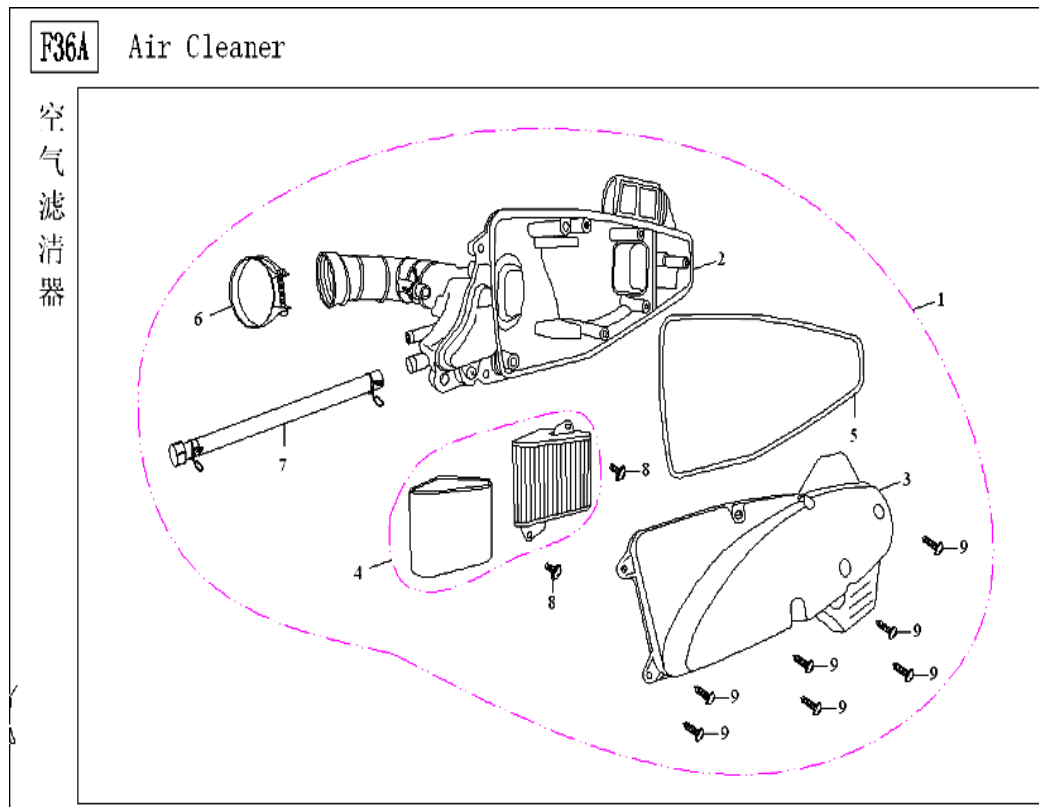


F36A Air Cleaner

NO.	Component and Parts No.	English Name	Quantity
F36A/1	BT125T-2-780100A	Air cleaner assy.	1
F36A/2	BT125T-2-780104A	Air cleaner case	1
F36A/3	BT125T-2-780111A	Air cleaner cover	1
F36A/4	BT125T-2-780110A	Air cleaner core	1
F36A/5	BT125T-2-780103A	Seal	1
F36A/6	BT125T-2-780101A	Band connecting	1
F36A/7	BT125T-2-780115A	Oil collecting tube	1
F36A/8	GB9074.14	Washer-screw M5*10	2
F36A/9	GB/T845-1985	Self-tapping screw ST4.8*16	7


F37 Seat

座垫

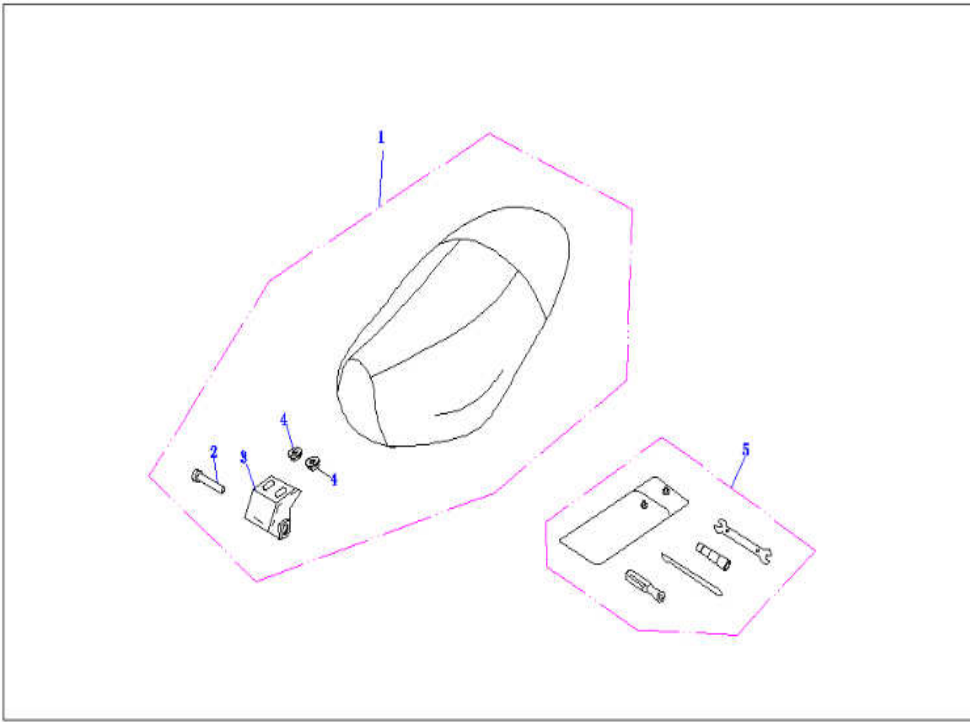

F37 Seat

NO.	Component and Parts No.	English Name	Quantity
F37/1	BT49QT-7-120006	Seat Assy	1
F37/2	BT49QT-7-120007	Shaft	1
F37/3	BT49QT-7-120008	Setting Bracket	1
F37/4	GB/T6170-1986	Nut M6	2
F37/5	BT50QT-9-790000	Tool Set	1

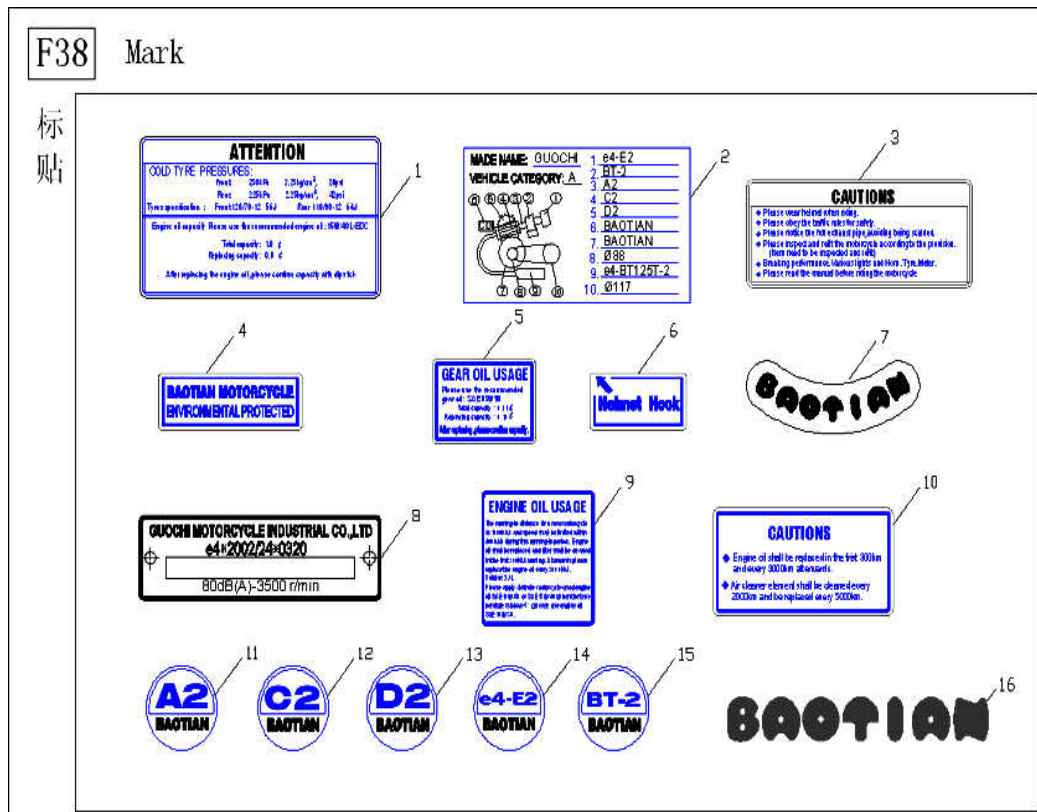

F38 Mark

NO.	Component and Parts No.	English Name	Quantity
F38/1	BT49QT-7-010005	Mark, Central Cover	1
F38/2	BT49QT-7-030004	Mark, Nameplate	1
F38/3	BT50QT-9-110803	Mark B Head Cover	1
F38/4	BT50QT-9-110802	Mark A Head Cover	1
F38/5	BT139QMB-000012	Mark Gear Oil	1
F38/6	BT50QT-9-000405	Mark Helmet Hook	1
F38/7	BT49QT-7-020004	Mark Front Decorating Cover	1
F38/8	BT49QT-7-090004	Nameplate Main Frame	1
F38/9	BT139QMB-000011	Mark Engine Oil	1
F38/10	BT50QT-9-780005	Mark Air Cleaner	1
F38/11	BT139QMB-000013	Mark A	1
F38/12	BT139QMB-000014	Mark C	1
F38/13	BT139QMB-000015	Mark D	1
F38/14	BT50QT-9-780006	Mark E	1
F38/15	BT50QT-11-090020	Mark Carburetor	1
F38/16	BT49QT-7-070202	Mark Body Side Cover	2