



SERVICE - INFO

Motorhacke MH 50 Verschiedene Arbeitsbreiten



34cm Arbeitsbreite

Es werden die Schutzscheiben und der äußere Hacksatz demontiert.




46cm Arbeitsbreite (original)



60cm Arbeitsbreite

Es müssen 2 Stück des linken äußeren Hacksatzes demontiert werden und auf der rechten Seite , nach außen gerichtet wieder montiert werden.

Es müssen 2 Stück des rechten äußeren Hacksatzes demontiert werden und auf der linken Seite , nach außen gerichtet wieder montiert werden.

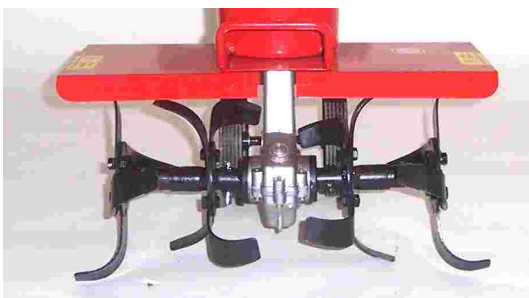

Für die Reduzierung der Arbeitsbreite verfahren Sie bitte in umgekehrter Reihenfolge.



SERVICE - INFO

Ering Tiller MH 50 How to change the work width



34cm work width

The sealing panes and the outside tiller blade are dismantled.




46cm work width



60cm work width

Must be dismantled 2 pieces of the left outside tiller blade and be installed directed toward the right side, outward again.
Must be dismantled 2 pieces of the right outside tiller blade and be installed directed toward the left side, outward again.

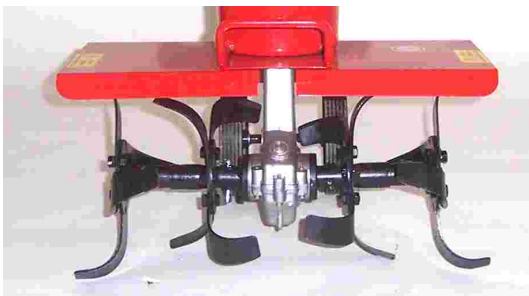

For the reduction the work width you proceed please in reverse order.